BIDIRECTIONAL DC POWER SUPPLY MODEL 62000D SERIES

Chroma 62000D programmable bidirectional DC power supplies provide both power source and load characteristics. These two quadrant power supplies allow power from the DUT to be converted back to the utility grid and so are ideal for testing renewable energy power systems such as PV, storage, and EV inverters as well as a wide range of bidirectional power conditioning system (PCS) and may also be used as a battery simulator. 62000D has applications in testing power components in electric vehicles as well as bidirectional on-board chargers (BOBC), bidirectional DC converters, and DC-AC motor drivers and can perform power conversion tests of Li-ion batteries in both charge and discharge directions.

To illustrate the 62000D unique capabilities, traditional DC power supplies need protection diodes to prevent Back EMF during motor testing does not damage the source. However, the 62000D bidirectional DC power supplies can drive the motor and also efficiently regenerate EMF to the grid, thereby avoiding the need for blocking diodes while saving space, energy, and configuration. In addition, the fast cross-quadrant bandwidth of the 62000D provides a transient response time of less than 1.5ms (-90% to +90%).

62000D bidirectional DC supplies include 9 different models with industry-leading power density at 18kW in 3U of vertical rack space. Model range from 6kW to 18kW, output current ratings up to ± 540 A, and voltage ratings up to 1800VDC. The master/slave feature allows for up to 10 models to be paralleled easily and safely up to 180kW.

62000D series is equipped with 100 programmable user settings through the unit's List Mode. The fast response time fills many testing needs, including the LV123 and LV148 standards required for new energy vehicle components. When combined with the Chroma Softpanel, the user can conduct the complex tests with simple clicks of the mouse.

62000D family of power supplies can easily be used in any region of the world due to its wide input range of 200-480 Vac and an active PFC low-current harmonic feed to grid, reducing power consumption, power system configuration, and ambient temperature changes under high-power testing. Control options include digital USB, LAN, CANbus, GPIB as well as analog APG interfaces.

MODEL 62000D SERIES

KEY FEATURES

- Voltage rating : 0~100V/600V/1200V/1800V
- Current rating: 0~540A
- Power rating: 6kW/12kW/18kW
- Two-quadrant operation: source and load functions
- High power density: 18kW in 3U
- Easy master/slave parallel & series *1 operation up to 180kW
- Wide range of voltage & current combinations in constant power
- Auto sequencing programming
- Voltage & current slew rate control
- High speed transient response <1.5ms
- Low output noise and ripple
- Intuitive and user-friendly touch control
- Standard USB/LAN/APG interfaces, optional CAN/GPIB interfaces
- 3-phase 4-wire universal AC power: 200~480 Vac
- *1: Only 600V models support series operation.

APPLICATIONS

- Charge/discharge testing and life cycle testing, including BOBC, DC-DC conversion, and PCS
- Motor driver testing
- Pre-compliant with LV123 and LV148 standards on electrical car components testing
- Used as battery simulation source for microgrid applications

















POWER CONVERSION TESTING OF ELECTRIC VEHICLES AND MICROGRID STORAGE

Renewable energy sources such as PV, EV, fuel cell, and battery are the market trend as the replacement of traditional energy sources (coal, oil, etc.). Yet, the subsequent rising need for electricity will actuate the faster commercialization of distributed energy storage in microgrids. The bidirectional design of power conversion devices urges battery applications to achieve high efficiency, high voltage conversion, and high power density direction, which prompts the need for battery simulation (bidirectional power supply) testing designs.

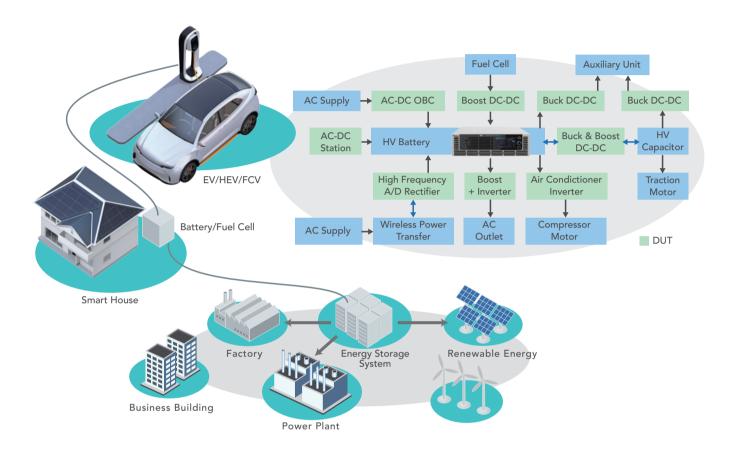


TWO-IN-ONE: BIDIRECTIONAL DC POWER SUPPLY AND LOAD

Chroma's 62000D has a bidirectional switch-mode power supply design that offers two-quadrant operation with positive current/positive voltage as well as negative current/positive voltage, enabling both DC power supply output and regenerative DC load. The absorbed energy feeds back to the grid with a conversion efficiency up to 93% and can operate in constant voltage, constant current, and constant power modes. Compared to traditional power supply and load, the 62000D two-in-one bidirectional DC power supply saves space, reduces energy loss and heat dissipation, and is easier to wire and configure.

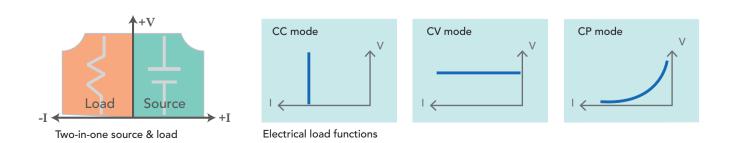


With the current evolution of electric cars, their on-board chargers are controlled through back and forth energy supply to V2G (Vehicle to Grid), V2L (Vehicle to Load), and V2H (Vehicle to Home). The regenerative load modes of the 62000D models include constant current (CC), constant voltage (CV), and constant power (CP) and simulate battery charging activity during developing and testing of the car. Where conventional methods needed one apparatus for DC power supply and another for regenerative DC load, one single Chroma 62000D can now fulfill both charging and discharging tests on its own.

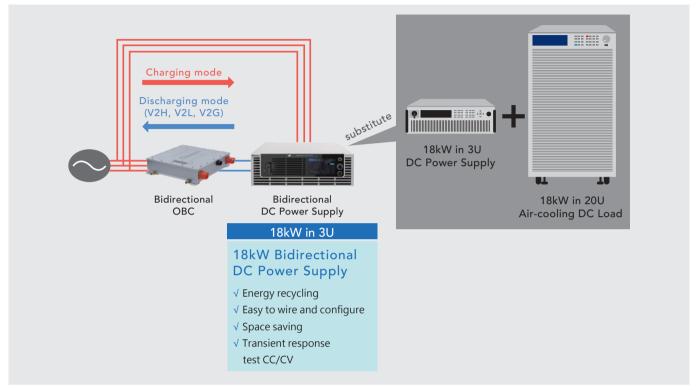

Bidirectional on-board charger testing configuration

HIGH VOLTAGE 1800V PCS TESTING


A power conditioning system (PCS) serves to realize bidirectional power conversion between the battery system and the grid with the terminal battery voltage of the newest devices reaching up to 1500V and having a charge/discharge function, active power control, reactive power regulation, and off-grid switch. A common issue for users is how to prepare an actual high voltage battery for testing the charge/discharge transition (with a standard <100ms) performance of this PCS and it is impossible to use R&D verification and manufacture with fast reproducibility, controllability, and safety. The high voltage 62180D-1800 (1800V/40A/18kW) model can be connected in parallel to reach 180kW/1800V/400A, so replacing the real battery simulation as power supply or regenerative power load to carry out this charge/discharge transition with a seamless switch.

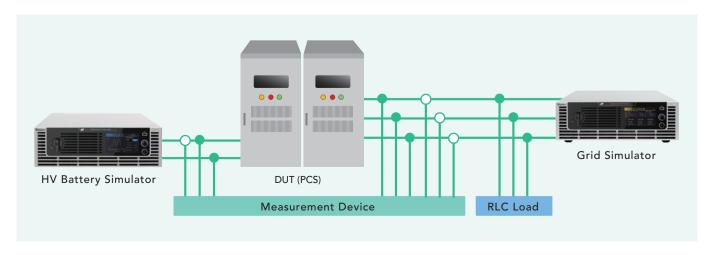


HIGH TRANSIENT RESPONSE < 1.5ms

Chroma 62000D allows seamless current conversion between the two quadrants of supply and electrical load without changing the output characteristics or causing damage. To use this in many bidirectional DC-DC and DC-AC battery charge/discharge tests requires very fast charge/discharge conversion. To increase this transient responsiveness, the 62000D bidirectional DC power supply has a high speed transient response time of less than 1.5ms (-90% to +90%) and gives stable voltage output.

To test the acceleration and braking of the motor driver under driving conditions, the conversion between the battery and power components will encounter supply and recharge of electrical energy. The very fast transient response of the 62000D two quadrants can simulate the battery and convert according to the actual needs of the motor, offering stable voltage and allowing current recharge during braking.

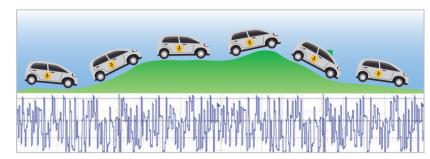

Simulation of actual driving conditions

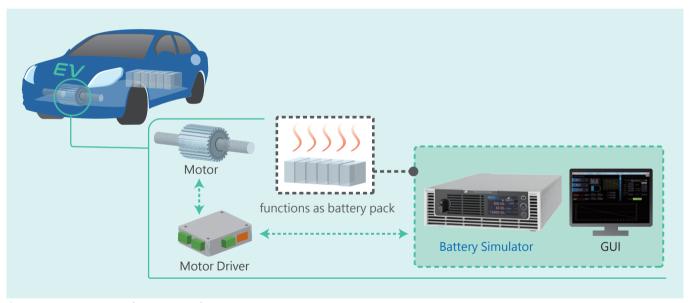

Start-stop system motor driver test application


BATTERY SIMULATION FUNCTION

62000D are bidirectional DC power supplies that can be charged or discharged by an external power source. Therefore, with the operation of software, the 62000D become battery simulators that can simulate operation at different capacity (SOC) or import specific battery characteristics V-I curves. It can evaluate the product under different battery capacities or with different battery characteristics. 62000D is suitable for testing various products such as BOBC, PCS, ESS or motor drivers.




TESTING STANDARDS LV123 AND LV 148

Along with the global energy efficiency and carbon emission reduction trends, the car industry have established technical development standards for new energy vehicles, which define tests for a variety of electric vehicles. The LV123 guidelines specify the vehicle's electrical characteristics and safety of high-voltage components, whereas the LV148 standard covers tests for electric and electronic components in 48V electrical system motor vehicles. Chroma 62000D has a high-speed CV dynamic response slope that can be controlled up to 180V/ms, which is applicable to the electrical characteristics tests of many vehicle guidelines. When combined with the Chroma Softpanel, the user can even conduct the tests at the push of a button.

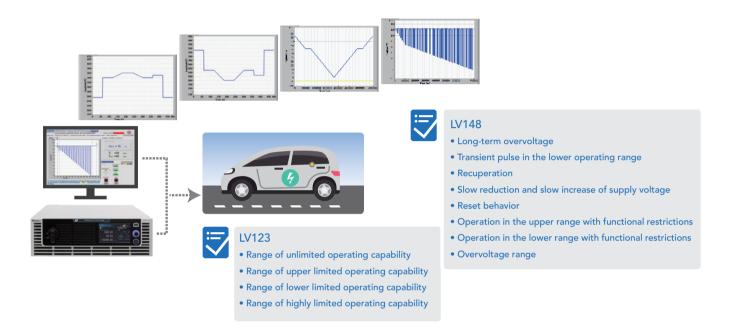


SAFETY AND AC FAULT PROTECTION

Chroma 62000D bidirectional DC power supplies have energy recycling function that returns energy to the grid. The internal protection design serves to identify input voltage and frequency anomalies. When detecting any anomalies, the 62000D will automatically turn off the output to ensure safe use of the grid. The 62000D is set up with OVP, OCP, OPP, OTP, Fan Fail, and AC Fault protection circuits. AC Fault protection includes OVP, UVP, Unbalance, Freq. Error, and OCP.

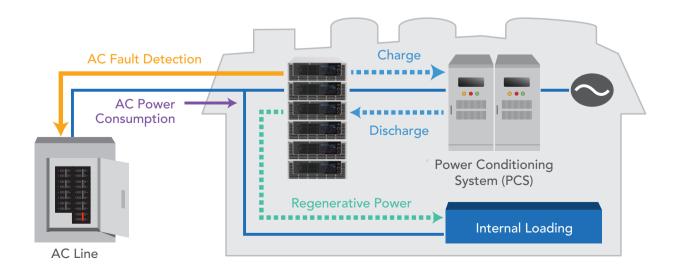

FOUR AUTO-OPERATING RANGES

Chroma's 62000D bidirectional DC power supplies include four auto-operating ranges. The 62180D-600 has an 18kW/600V/120A output and operates flexibly in various combinations as the figure below shows. Compared with the three output ranges of competitors, the 62000D can give much greater current at low voltage. This offers an even wider coverage of low voltage/high current and high voltage/low current DUTs that other DC power supplies can test. When used into a standard ATE system or on a laboratory table, one 62000D can replace multiple DC power supplies to significantly save space and costs.

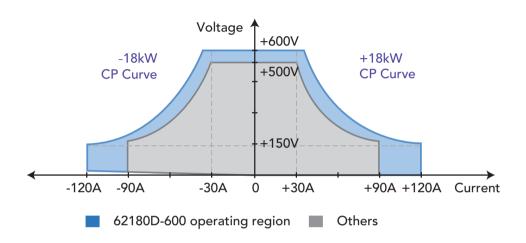

When testing high power 10kW~180kW conversion components (e.g. PCS, ESS, Charger, Inverter), users need to consider small volume, light weight, utilization rate, flexible assembly and disassembly for operation of various power systems, and influence of R&D during system failure and maintenance. The 62000D Series has a smart master/slave control mode that can connect 2 to 10 devices, enabling fast and simple series/parallel operation for use by R&D, QC, and at the production line. In this mode, the master scales values and downloads data to slave units so programming is as simple as using a single unit, and the digital current sharing is highly stable and without noise interference.



Master/slave parallel operation up to 180kW * Call for availability

UNIVERSAL AC POWER RANGE 200~480VAC

Chroma 62000D bidirectional DC power supply is equipped with an active PFC >0.97 for low energy consumption and high conversion efficiency. Moreover, to fit the universal AC power input range, the 62000D series has a very wide input power range of three-phase 200Vac to 220Vac and 380Vac to 480Vac inputs. The user can buy one single device without having to configure it for use in other areas.

REMOTE INTERFACES


Chroma 62000D supports various remote interfaces, enabling the user to control the PC through the standard USB and LAN or optional GPIB interfaces. Moreover, the optional CAN interface as frequently used in the automobile industry is compliant with the CAN2.0 A 11-bit and CAN2.0 B 29-bit identifiers and has a V/I/P cycle time of up to 10ms.

USER-FRIENDLY INTUITIVE CONTROL INTERFACE

Chroma 62000D has a next generation human-machine control interface with an intuitive and user-friendly touch screen. Operation of the apparatus is as easy as using a smartphone, with its intelligent and convenient user interface; through icons on the touch screen, the user can complete any voltage/current settings and measurements, program sequence control settings, preview output waveforms, etc.




Control interface

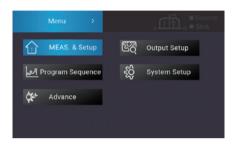





PANEL DESCRIPTION

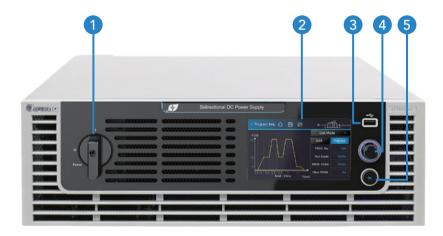

- 1. POWER Switch
- 2. TFT Control Interface

Displays: measurements, setup, control, and status

- 3. USB HOST (not yet supported)
 Programming: program fetching, data
 downloading, firmware updates, etc.
- Pushable Rotary Switch
 Rotate to edit screen and set values; after configuration, push to confirm input
- 5. OUTPUT ON Key

Press the ON key: light indicates Output ON, dark indicates Output OFF

- 6. GPIB & CAN Interfaces Shared Slot (choose one)
- Analog Programming Interface
 For analog level to program and monitor output voltage & current
- 8. DC Output Terminal
- 9. Remote Sense Terminal
- Current Sharing Terminal
 Connect the cable to slave unit
- 11. USB Interface (standard)
- 12. LAN Interface (standard)
- 13. AC Input Terminal

SPECIFICATIONS - 1 (100V & 600V Models)

Model	62060D-100	62120D-100	62180D-100	62060D-600	62120D-600	62180D-600		
Source/Sink Ratings	020002 100	021202 100	021002 100	020002 000	021202 000	021000 000		
Source/Sink Voltage	0~100V 0~600V							
Source/Sink Current	±180A	±360A	±540A	±40A	±80A	±120A		
Source/Sink Power *1	±6000W	±12000W	±18000W	±6000W	±12000W	±18000W		
Line Regulation	_000011	= 1200011	= 1000011	=000011	= 1200011	= 1000011		
Voltage	±0.01% F.S.							
Current	± 0.01% F.S. ± 0.05% F.S.							
Load Regulation				7,0 1.01				
Voltage	±0.04% F.S.							
Current	±0.1% F.S.							
Voltage Measurement								
Range		20V / 100V			120V / 600V			
Accuracy			0.05% +	<u> </u>				
Current Measurement								
Range	36A / 180A	72A / 360A	108A / 540A	8A / 40A	16A / 80A	24A / 120A		
Accuracy	0.1% + 0.1%E.S.							
Output Noise & Ripple								
P-P (20MHz)		150 mV		420mV				
rms (Voltage)	25 mV		85mV					
rms (Current)	150mA	300mA	450mA	30mA	60mA	90mA		
Programming Response Time				2 2 1 1 1 1				
Rise Time (Full Load)	10 ms 20ms							
Rise Time (No Load)	10 ms			10 ms				
Fall Time (Full Load)	10 ms			20ms				
Fall Time (No Load)	10 ms			10 ms				
Slew Rate Control				l				
Voltage slew rate range (No Load)	0.001V/ms~ 10V/ms			0.001V/ms~60V/ms				
Voltage slew rate range (Full Load)	0.001V/ms~10V/ms			0.001V/ms~30V/ms				
Current slew rate range	0.001A~ 10A/ms	0.001A~ 20A/ms	0.001A~ 30A/ms	0.001A~ 20A/ms	0.001A~ 40A/ms	0.001A~ 60A/ms		
Minimum transition time (CV)		0.5ms			0.5ms			
Transient Response Time (CV)	Recovers within 500us to ±0.75% of steady-state output for			for a 50% to 100%	,			
Operating Mode								
Source	CC, CV, CP							
Load				CV, CP				
Efficiency (Typical)	Source > 0.91 Sink > 0.91	Source > 0.91 Sink > 0.91	Source > 0.92 Sink > 0.92	Source > 0.91 Sink > 0.93	Source > 0.92 Sink > 0.93	Source > 0.92 Sink > 0.93		
Drift (30 minutes)								
Voltage	0.04% of Vmax			0.04% of Vmax				
Current	0.06% of Imax			0.06% of Imax				
Drift (8 hours)								
Voltage	0.02% of Vmax			0.02% of Vmax				
Current	0.04% of Imax			0.04% of Imax				
Temperature Coefficient								
Voltage	0.04% of Vmax/°C			0.04% of Vmax/°C				
Current	0.06% of Imax/°C			0.06% of Imax/°C				
Voltage								

Note *1: When input at low voltage 200Vac~220Vac, output power rate derates to 67%; when input at high voltage 380Vac~480Vac, output power is a full 100%. (Example: 18kW derates to 12kW at 200Vac~220Vac.

SPECIFICATIONS - 1 (100V & 600V Models)

Model	62060D-100	62120D-100	62180D-100	62060D-600	62120D-600	62180D-600
Programming & Measurement Resolution						
Voltage (Front Panel)		10 mV			10 mV	
Current (Front Panel)		10 mA			10 mA	
Voltage (Digital Interface)		0.002% of Vmax		0.002% of Vmax		
Current (Digital Interface)	0.002% of Ima				0.004% of Imax	
Voltage (Analog Interface)		0.04% of Vmax		0.04% of Vmax		
Current (Analog Interface)		0.04% of Imax			0.04% of Imax	
Programming Accuracy		010 170 01 1111021			0.0 170 01 111.07	
Voltage (Front Panel and Digital Interface)		0.05% of Vmax			0.05% of Vmax	
Current (Front Panel and Digital Interface)		0.05% of Vmax 0.2% of Imax		0.2% of Imax		
Power (Front Panel and Digital Interface)		0.3% of Pmax		0.3% of Pmax		
Voltage (Analog Interface)		0.2% of Vmax		0.2% of Vmax		
Current (Analog Interface)		0.3% of Imax		0.2% of Vmax 0.3% of Imax		
APG Measurement Accuracy		0.5 % OF ITTIAX		0.3% of imax		
-		0.59/ -5.1/			0 F9/ af \/	
Voltage (Analog Interface)	0.5% of Vmax			0.5% of Vmax		
Current (Analog Interface)	0.75% of Imax				0.75% of Imax	
Analog Interface (I/O)						
Voltage and Current Programming Inputs (I/P)	Voltage : 0~10 Vdc of F.S. Current : Source I : 0~10 Vdc of F.S. Load I : 0~10 Vdc of F.S.					
Voltage and Current	Voltage : 0∼10 Vdc of F.S.					
Monitor Output (O/P)	Current : -10~10 Vdc of F.S.					
External ON/OFF (I/P)		T	TL: Active Low o	r High (selective		
DC_ON Signal (O/P)		TTL: Active High	(Time delay=1m:	s at voltage slew	rate of 10V/ms.)	
CV or CC Mode Indicator (O/P)			High=CV mode			
OTP Indicator (O/P)			TTL: Act			
System Fault Indicator (O/P)	TTL: Active Low					
Safety Interlock (I/P)	Time accuracy: <100ms					
Remote Inhibit (I/P)	TTL: Active Low					
OVP Adjustment Range			,			
Range	0~110% programmable					
Accuracy	±1% of full scale output					
Auto Sequencing (List Mode)	± 1 % of full scale output					
Number of Program			1:	n		
Number of Sequence			10			
Dwell time Range			5000s			
Trig. Source			to / External			
Auto Sequencing (Step Mode)			Ivialidal / Ad	to / External		
Start Voltage			0 to fu	ll scalo		
End Voltage	0 to full scale 0 to full scale					
Run Time						
	hh : mm : ss.sss (00 : 00 : 00.001 to 99 : 59 : 59.99)					
Trig. Source	Auto Master / Slave control for 10 units (Series: 2 units / Parallel: 10 units)			١		
Series & Parallel Operation	ı ı	viaster / Slave cor	itror for 10 units	(Series: Z units /	rarallel: 10 units	1
Input Specification		0.1	2001/ 2221	+100/	1	
AC Input Voltage 3-phase,	3 \Phi 200Vac~220Vac \pm 10\% w/o neutral 3 \Phi 380Vac~480Vac \pm 10\% w/o neutral					
3-wire + Ground (w/o neutral)	30 380Vac~480Vac±10% w/o neutral (67% output power@200~220Vac input, 100% output power@380~480Vac input)		c input)			
AC Frequency Range	(67% output power@200~220Vac input, 100% output power@380~480Vac input) 47~63 Hz					
Power Factor	4/~63 Hz >0.97					
General Specification			<i></i>	••		
Maximum Remote Sense Line Drop Compensation	2.5% of full scale voltage per line (5% total)		2% of full scale voltage per line (4% total)			
Operating Temperature Rage			0°C~			
Storage Temperature Rage	-25°C~70°C					
Dimension Size (HxWxD) mm			28 x 730 mm / 5			
Weight (kg)	37 kg/81.51 lbs 41 kg/90.3 lbs 45 kg/100 lbs 25 kg/55.1 lbs 32 kg/70.5 lbs 39 kg/86.1 lbs					
and the second s	the same of the sa					

^{*} All specifications are subject to change without notice.

SPECIFICATIONS - 2 (1200V & 1800V Models)

Model	62120D-1200	62180D-1200	62180D-1800		
Source/Sink Ratings	021200 1200	021000 1200	021002 1000		
Source/Sink Voltage	0~1200V	0~1200V	0~1800V		
Source/Sink Current	±40A	±40A	±40A		
Source/Sink Power *1	± 12000W	±18000W	±18000W		
Line Regulation	± 12000VV	± 18000VV	± 18000VV		
Voltage		±0.01% F.S.			
Current	±0.01% F.S. ±0.05% F.S.				
Load Regulation		± 0.03 % 1.3.			
Voltage		+0.04% ES			
Current	±0.04% F.S. ±0.1% F.S.				
		±0.1% F.3.			
Voltage Measurement	240V /1200V	240V /1200V	360V / 1800V		
Range	0.05% + 0.05%F.S.	0.05% + 0.075%F.S.	0.05% + 0.05%F.S.		
Accuracy	0.05% + 0.05%F.S.	0.05% + 0.075%F.S.	0.05% + 0.05%F.S.		
Current Measurement	0.4 / 40.4	0.0 / 40.0	0.4 / 40.4		
Range	8A / 40A	8A / 40A	8A / 40A		
Accuracy		0.1% + 0.1%F.S.			
Output Noise & Ripple	242.14	10/0 1/	10/0 1/		
P-P (20MHz)	840mV	1260mV	1260mV		
rms (Voltage)	170mV	255mV	255mV		
rms (Current)	30mA	30mA	30mA		
Programming Response Time					
Rise Time (Full Load)		20ms			
Rise Time (No Load)		10 ms			
Fall Time (Full Load)	20ms				
Fall Time (No Load)	10ms				
Slew Rate Control					
Voltage slew rate range (No Load)	0.001V/ms~120V/ms	0.001V/ms~180V/ms	0.001V/ms~180V/ms		
Voltage slew rate range (Full Load)	0.001V/ms~60V/ms	0.001V/ms~90V/ms	0.001V/ms~90V/ms		
Current slew rate range	0.001A~20A/ms				
Minimum transition time (CV)		0.5ms			
Transient Response Time (CV)	Recovers within 500 μ s to $\pm 0.75\%$ o	f steady-state output for a 50% to 10 µs)	0% or 100% to 50% load change (1A/		
Operating Mode					
Source		CC, CV, CP			
Load		CC, CV, CP			
Efficiency (Typical)	Source > 0.92 Sink > 0.93	Source > 0.91 Sink > 0.90	Source > 0.92 Sink > 0.93		
Drift (30 minutes)					
Voltage	0.04% of Vmax	0.06% of Vmax	0.04% of Vmax		
Current		0.06% of Imax			
Drift (8 hours)					
Voltage	0.02% of Vmax	0.03% of Vmax	0.02% of Vmax		
Current		0.04% of Imax			
Temperature Coefficient					
Voltage	0.04% of Vmax/°C	0.06% of Vmax/°C	0.04% of Vmax/°C		
Current	0.06% of Imax/°C				

Note \pm 1: When input at low voltage 200Vac~220Vac, output power rate derates to 67%; when input at high voltage 380Vac~480Vac, output power is a full 100%. (Example: 18kW derates to 12kW at 200Vac~220Vac.

SPECIFICATIONS - 2 (1200V & 1800V Models)

Model 62120D-1200 62180D-1200 Programming & Measurement Resolution Voltage (Front Panel) 100 mV 100 mV Current (Front Panel) 10 mA 10 mA Voltage (Digital Interface) 0.002% of Vmax 0.003% of Vmax Current (Digital Interface) 0.004% of Vmax 0.004% of Imax Voltage (Analog Interface) 0.04% of Vmax 0.06% of Vmax Current (Analog Interface) 0.05% of Vmax 0.075% of Vmax Current (Front Panel and Digital Interface) 0.2% of Imax Power (Front Panel and Digital Interface) 0.3% of Pmax 0.3% of Pmax Voltage (Analog Interface) 0.2% of Vmax Current (Analog Interface) 0.3% of Imax APG Measure Accuracy Voltage (Analog Interface) 0.5% of Vmax	100 mV 10 mA 0.002% of Vmax				
Voltage (Front Panel) Current (Front Panel) 10 mA 10 mA Voltage (Digital Interface) 0.002% of Vmax 0.003% of Vmax Current (Digital Interface) Voltage (Analog Interface) 0.004% of Vmax 0.06% of Vmax Current (Analog Interface) 0.04% of Vmax Voltage (Front Panel and Digital Interface) Current (Front Panel and Digital Interface) 0.05% of Vmax 0.075% of Vmax 0.2% of Imax Power (Front Panel and Digital Interface) 0.3% of Pmax Voltage (Analog Interface) 0.3% of Pmax 0.3% of Pmax Voltage (Analog Interface) 0.3% of Imax APG Measure Accuracy Voltage (Analog Interface) 0.5% of Vmax	10 mA 0.002% of Vmax				
Current (Front Panel) 10 mA 10 mA 10 mA Voltage (Digital Interface) 0.002% of Vmax 0.003% of Vmax 0.003% of Vmax 0.004% of Imax Voltage (Analog Interface) 0.04% of Vmax 0.06% of Vmax Current (Analog Interface) 0.04% of Imax Programming Accuracy Voltage (Front Panel and Digital Interface) 0.05% of Vmax 0.075% of Vmax 0.2% of Imax Power (Front Panel and Digital Interface) 0.3% of Pmax Voltage (Analog Interface) 0.2% of Vmax 0.3% of Pmax Voltage (Analog Interface) 0.3% of Imax APG Measure Accuracy Voltage (Analog Interface) 0.5% of Vmax	10 mA 0.002% of Vmax				
Voltage (Digital Interface) Current (Digital Interface) O.002% of Vmax O.003% of Vmax O.004% of Imax O.004% of Imax O.06% of Vmax O.06% of Vmax Current (Analog Interface) Voltage (Front Panel and Digital Interface) Current (Front Panel and Digital Interface) O.2% of Imax O.2% of Imax O.2% of Imax O.3% of Pmax Voltage (Analog Interface) O.3% of Pmax O.3% of Pmax Voltage (Analog Interface) O.3% of Imax	0.002% of Vmax				
Current (Digital Interface) O.004% of Imax O.06% of Vmax O.06% of Vmax O.04% of Imax O.05% of Vmax O.075% of Vmax O.075% of Vmax O.2% of Imax O.2% of Imax O.3% of Pmax O.3% of Pmax O.3% of O.3% of Imax					
/oltage (Analog Interface) O.04% of Vmax O.06% of Vmax O.04% of Imax Programming Accuracy /oltage (Front Panel and Digital Interface) O.05% of Vmax O.075% of Vmax O.075% of Vmax O.075% of Vmax O.2% of Imax Ower (Front Panel and Digital Interface) O.3% of Pmax O.3% of Pmax /oltage (Analog Interface) O.2% of Vmax O.3% of Imax APG Measure Accuracy /oltage (Analog Interface) O.5% of Vmax	0.04% of Vmax				
Current (Analog Interface) Programming Accuracy /oltage (Front Panel and Digital Interface) O.05% of Vmax O.2% of Imax O.2% of Imax O.2% of Imax O.3% of Pmax O.3% of Pmax /oltage (Analog Interface) O.2% of Vmax O.3% of Pmax O.3% of Imax	0.0476 OF VIIIAX				
Programming Accuracy /oltage (Front Panel and Digital Interface) 0.05% of Vmax 0.075% of Vmax Current (Front Panel and Digital Interface) 0.2% of Imax Power (Front Panel and Digital Interface) 0.3% of Pmax 0.3% of Pmax /oltage (Analog Interface) 0.2% of Vmax Current (Analog Interface) 0.3% of Imax APG Measure Accuracy /oltage (Analog Interface) 0.5% of Vmax					
Voltage (Front Panel and Digital Interface) O.05% of Vmax O.075% of Vmax O.2% of Imax O.2% of Imax O.3% of Pmax O.3% of Pmax O.3% of Pmax Voltage (Analog Interface) O.3% of Pmax O.3% of Vmax O.3% of Imax O.3% of Vmax O.3% of Imax					
Current (Front Panel and Digital Interface) O.2% of Imax Power (Front Panel and Digital Interface) O.3% of Pmax O.3% of Pmax O.2% of Vmax Current (Analog Interface) O.3% of Imax APG Measure Accuracy /oltage (Analog Interface) O.5% of Vmax	0.05% of Vmax				
Power (Front Panel and Digital Interface) O.3% of Pmax O.2% of Vmax Current (Analog Interface) O.3% of Pmax O.3% of Pmax O.3% of Pmax O.3% of Pmax O.3% of Vmax O.3% of Vmax O.3% of Vmax O.3% of Vmax	0.03 % OF VIIIax				
/oltage (Analog Interface) 0.2% of Vmax Current (Analog Interface) 0.3% of Imax APG Measure Accuracy /oltage (Analog Interface) 0.5% of Vmax	0.3% of Pmax				
Current (Analog Interface) O.3% of Imax APG Measure Accuracy /oltage (Analog Interface) 0.5% of Vmax	0.5 % OI FIIIAX				
APG Measure Accuracy /oltage (Analog Interface) 0.5% of Vmax					
/oltage (Analog Interface) 0.5% of Vmax					
Current (Analog Interface) 0.75% of Imax					
Analog Interface (I/O)					
/oltage and Current Voltage : 0~10 Vdc of F.S.					
Programming Inputs (I/P) Current: Source 1: 0~10 Vdc of F.S.	Current : Source I : 0~10 Vdc of F.S.				
/oltage and Current Voltage : 0~10 Vdc of F.S.	Load I : 0~10 Vdc of F.S.				
	Current: -10~10 Vdc of F.S.				
External ON/OFF (I/P) TTL: Active Low or High (selective)					
	f 10\//ma \				
DC_ON Signal (O/P) TTL: Active High (Time delay=1ms at voltage slew rate of					
CV or CC Mode Indicator (O/P) TTL Level High=CV mode; TTL Level Low=CC mo	ode				
DTP Indicator (O/P) TTL: Active Low					
system Fault Indicator (O/P) TTL: Active Low					
	Time accuracy: <100ms				
Remote Inhibit (I/P) TTL: Active Low					
DVP Adjustment Range					
	0~110% programmable				
·	\pm 1% of full scale output				
Auto Sequencing (List Mode)					
Number of Program 10					
Number of Sequence 100					
Owell time Range 2ms~15000s					
rig. Source Manual / Auto / External					
Auto Sequencing (Step Mode)					
itart Voltage 0 to full scale					
ind Voltage 0 to full scale					
Run Time hh : mm : ss.sss (00 : 00 : 00.001 to 99 : 59 : 59.9	9)				
rig. Source Auto					
Series & Parallel Operation Master / Slave control for 10 units. (Series: 2 units / Paralle	el: 10 units)				
nput Specification					
3.0 200Vac~220Vac+10% w/o neutral					
AC Input Voltage 3 phase,					
Miro + (Fround (w/o noutral))	(67% output power@200~220Vac input, 100% output power@380~480Vac input)				
AC Frequency Range 47~63 Hz					
ower Factor >0.97					
Seneral Specification					
·	% of full scale voltage per line (4% total)				
	per line (+/6 total)				
torage Temperature Rage -25°C~70°C					
Dimension Size (HxWxD) mm 133 x 428 x 730 mm / 5.23 x 16.85 x 28.74 inch Weight (kg) 32 kg/70.5 lbs 39 kg/86.1 lbs	39 kg/86.1 lbs				

^{*} All specifications are subject to change without notice.

ORDERING INFORMATION

62000D Series: Programmable Bidirectional DC Power Supply

* 62060D-100: Programmable Bidirectional DC Power Supply 100V/180A/6kW

* 62120D-100 : Programmable Bidirectional DC Power Supply 100V/360A/12kW

* 62180D-100: Programmable Bidirectional DC Power Supply 100V/540A/18kW

* 62060D-600 : Programmable Bidirectional DC Power Supply 600V/40A/6kW

 \star 62120D-600 : Programmable Bidirectional DC Power Supply 600V/80A/12kW

62180D-600: Programmable Bidirectional DC Power Supply 600V/120A/18kW

 \star 62120D-1200 : Programmable Bidirectional DC Power Supply 1200V/40A/12kW

* 62180D-1200 : Programmable Bidirectional DC Power Supply 1200V/40A/18kW

* 62180D-1800 : Programmable Bidirectional DC Power Supply 1800V/40A/18kW

* A620039 : GPIB Interface * A620045 : CAN Interface * A620046 : 62000D Softpanel

* Call for availability

Get more product & global distributor information in Chroma ATE APP







Search Keyword

62000D

HEADQUARTERS CHROMA ATE INC. 88 Wenmao Rd., Guishan Dist., Taoyuan City 333001, Taiwan T +886-3-327-9999 F +886-3-327-8898 www.chromaate.com info@chromaate.com U.S.A. CHROMA SYSTEMS SOLUTIONS, INC. 19772 Pauling, Foothill Ranch, CA 92610 T +1-949-600-6400 F +1-949-600-6401 www.chromausa.com sales@chromausa.com EUROPE CHROMA ATE EUROPE B.V. Morsestraat 32, 6716 AH Ede, The Netherlands T +31-318-648282 F +31-318-648288 www.chromaeu.com salesni@chromaeu.com

sales@chromausa.com CHROMA GERMANY GMBH Südtiroler Str. 9, 86165, Augsburg, Germany T +49-821-790967-0 F +49-821-790967-600 www.chromaeu.com salesde@chromaeu.com JAPAN CHROMA JAPAN CORP. 888 Nippa-cho, Kouhoku-ku, Yokohama-shi, Kanagawa, 223-0057 Japan T +81-45-542-1118 F +81-45-542-1080 www.chroma.co.jp info@chroma.co.jp KOREA CHROMA ATE KOREA BRANCH 3F Richtogether Center, 14, Pangyoyeok-ro 192, Bundang-gu, Seongnam-si, Gyeonggi-do 13524, Korea T +82-31-781-1025 F +82-31-8017-6614 www.chromaate.co.kr info@chromaate.co.kr

CHINA
CHROMA ELECTRONICS
(SHENZHEN) CO., LTD.
8F, No.4, Nanyou Tian
An Industrial Estate,
Shenzhen, China
T +86-755-2664-4598
F +86-755-2641-9620
www.chroma.com.cn
info@chromaate.com

SOUTHEAST ASIA
QUANTEL PTE LTD.
(A company of Chroma Group)
25 Kallang Avenue #05-02
Singapore 339416
T +65-6745-3200
F +65-6745-9764
www.quantel-global.com
sales@quantel-global.com