




**Newton4th Ltd**

# PPA5500

## Communications Manual

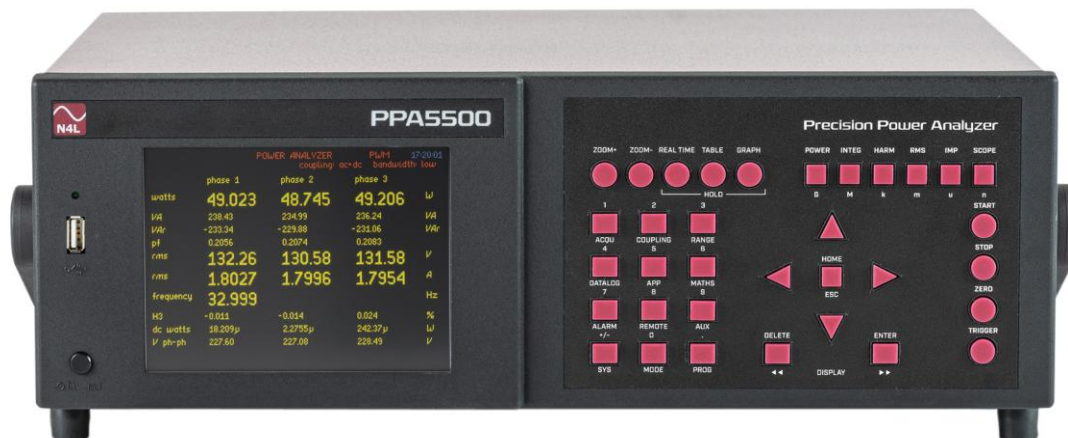

This manual is copyright © 2006-2021 Newton4th Ltd. and all rights are reserved. No part may be copied or reproduced in any form without prior written consent.

Document Title: PPA55xx Communications Manual v4.0

Document Release Date: 03<sup>rd</sup> March 2021

PPA55xx Firmware version on release date: v2.185

**Document Ref: D000227 issue 04**

## **IMPORTANT SAFETY INSTRUCTIONS**

This equipment is designed to comply with BSEN 61010-1 (2001) (Safety requirements for electrical equipment for measurement, control, and laboratory use) – observe the following precautions:

- Ensure that the supply voltage agrees with the rating of the instrument printed on the back panel **before** connecting the mains cord to the supply.
- This appliance **must** be earthed. Ensure that the instrument is powered from a properly grounded supply.
- The inputs are rated at 1kV rms or dc cat II; 600V rms or dc cat III. **Do not exceed the rated input.**
- Keep the ventilation holes on the underneath and rear free from obstruction.
- Do not operate or store under conditions where condensation may occur or where conducting debris may enter the case.
- There are no user serviceable parts inside the instrument – do not attempt to open the instrument, refer service to the manufacturer or his appointed agent.

**Note: Newtons4th Ltd. shall not be liable for any consequential damages, losses, costs or expenses arising from the use or misuse of this product however caused.**

## **ABOUT THIS MANUAL**

This manual gives details of the communication commands recognized by the PPA55xx series of instruments over RS232, USB, LAN or GPIB. For more general operating instructions for the instrument refer to the specific user manual.

Each command is listed alphabetically with details of any arguments and reply. A one-line summary of each command is given in the appendix. Although most of the commands apply to all instruments in the range there are some commands that are specific to one instrument or another.

The information in this manual is believed to be accurate and complete but Newtons4th Ltd cannot accept any liability whatsoever for any consequential damage or losses arising from any errors, inaccuracies, or omissions.

## CONTENTS

|          |                                     |            |
|----------|-------------------------------------|------------|
| <b>1</b> | <b>Using remote control .....</b>   | <b>1-1</b> |
| 1.1      | Standard event status register..... | 1-3        |
| 1.2      | Serial Poll status byte .....       | 1-4        |
| 1.3      | RS232 connections.....              | 1-5        |
| 1.4      | Data format .....                   | 1-6        |
| <b>2</b> | <b>Communication commands .....</b> | <b>2-1</b> |
|          | *CLS .....                          | 2-1        |
|          | *ESE .....                          | 2-2        |
|          | *ESR?.....                          | 2-3        |
|          | *IDN?.....                          | 2-4        |
|          | *OPC? .....                         | 2-5        |
|          | *RST .....                          | 2-6        |
|          | *SRE .....                          | 2-7        |
|          | *SRE?.....                          | 2-8        |
|          | *STB?.....                          | 2-9        |
|          | *TRG .....                          | 2-10       |
|          | *TST?.....                          | 2-11       |
|          | *WAI .....                          | 2-12       |
|          | ABORT.....                          | 2-13       |
|          | ADIMAP .....                        | 2-14       |
|          | ALARM .....                         | 2-15       |
|          | ALARM? .....                        | 2-16       |
|          | ALARM1 .....                        | 2-17       |
|          | ALARM2 .....                        | 2-18       |
|          | ALARME .....                        | 2-19       |
|          | ALARME?.....                        | 2-20       |
|          | ANALOG.....                         | 2-21       |
|          | ANALOG? .....                       | 2-22       |
|          | APPLIC.....                         | 2-23       |
|          | BANDWI .....                        | 2-24       |
|          | BANDWI? .....                       | 2-25       |
|          | BEEP .....                          | 2-26       |
|          | BLANKI .....                        | 2-27       |
|          | CALSTR? .....                       | 2-28       |
|          | CALVER? .....                       | 2-29       |
|          | CAPTUR?.....                        | 2-30       |
|          | CONFIG .....                        | 2-32       |
|          | CONFIG?.....                        | 2-33       |
|          | COUPLI .....                        | 2-34       |

## PPA55xx communications manual

|                |      |
|----------------|------|
| COUPLI? .....  | 2-35 |
| DATALO .....   | 2-36 |
| DATALO? .....  | 2-37 |
| DAV? .....     | 2-38 |
| DAVER .....    | 2-39 |
| DAVER? .....   | 2-40 |
| DISPLAY .....  | 2-41 |
| DISPLAY? ..... | 2-42 |
| EFFICI .....   | 2-43 |
| EFFICI? .....  | 2-44 |
| FAST .....     | 2-45 |
| FQLOCK .....   | 2-46 |
| FQREF .....    | 2-47 |
| FREQFI .....   | 2-48 |
| FREQUE .....   | 2-49 |
| FSD? .....     | 2-50 |
| HARMON .....   | 2-51 |
| HARMON? .....  | 2-53 |
| HOLD .....     | 2-54 |
| INPUT .....    | 2-55 |
| INTEGR .....   | 2-56 |
| INTEGR? .....  | 2-57 |
| KEYBOA .....   | 2-58 |
| LCR .....      | 2-59 |
| LCR? .....     | 2-60 |
| LOWFRE .....   | 2-61 |
| MODE .....     | 2-62 |
| MSLAVE .....   | 2-63 |
| MULTIL .....   | 2-64 |
| MULTIL? .....  | 2-65 |
| NEWLOC .....   | 2-67 |
| NOISEF .....   | 2-68 |
| NOOVER .....   | 2-69 |
| NORMAL .....   | 2-70 |
| PFCONV .....   | 2-71 |
| PHANGREF ..... | 2-72 |
| PHANGREF ..... | 2-72 |
| PHASEM .....   | 2-73 |
| PHASEM? .....  | 2-74 |
| PHCONV .....   | 2-75 |
| POWER .....    | 2-76 |
| POWER? .....   | 2-77 |
| PRIMAR .....   | 2-79 |
| PROGRA .....   | 2-80 |

## PPA55xx communications manual

|                            |       |
|----------------------------|-------|
| PROGRA?                    | 2-81  |
| RANGE                      | 2-82  |
| RESOLU                     | 2-83  |
| RESULT                     | 2-84  |
| RESULT?                    | 2-85  |
| REZERO                     | 2-86  |
| SCALE                      | 2-87  |
| SCOPE?                     | 2-88  |
| SCREEN?                    | 2-89  |
| SETUP                      | 2-90  |
| SETUP?                     | 2-91  |
| SHUNT                      | 2-92  |
| SMOOTH                     | 2-93  |
| SPEED                      | 2-94  |
| START                      | 2-95  |
| STATUS?                    | 2-96  |
| STOP                       | 2-97  |
| SUSPEN                     | 2-98  |
| TAGREP                     | 2-99  |
| TEMPER                     | 2-100 |
| TEMPER?                    | 2-101 |
| TORQSP                     | 2-102 |
| TORQSP?                    | 2-103 |
| USER?                      | 2-104 |
| VARCON                     | 2-105 |
| VERSIO?                    | 2-106 |
| VRMS                       | 2-107 |
| VRMS?                      | 2-108 |
| WIRING                     | 2-109 |
| XSCALE                     | 2-110 |
| ZERO                       | 2-112 |
| ZOOM                       | 2-113 |
| ZOOM?                      | 2-114 |
| Multilog Application Guide | 2-115 |

Appendix A – command summary

Appendix B – configurable parameters

Appendix C – MULTILOG parameters

## 1 Using remote control

The instrument is fitted with an RS232 serial communications port, USB, IEEE488 (GPIB) and LAN interface. All the interfaces use the same ASCII protocol with the exception of the end of line terminators:

|                   | Rx expects                             | Tx sends                         |
|-------------------|----------------------------------------|----------------------------------|
| RS232<br>USB, LAN | carriage return<br>(line feed ignored) | carriage return<br>and line feed |
| IEEE488           | carriage return or<br>line feed or EOI | carriage return<br>with EOI      |

All the functions of the instrument can be programmed via any interface, and results read back. When the IEEE488 interface is set to 'remote' the other ports are ignored.

The commands are not case sensitive and white space characters are ignored (e.g. tabs and spaces). Replies from the instrument are always upper case, delimited by commas, without spaces.

Only the first six characters of any command are important – any further characters will be ignored. For example, the command to set the generator frequency is FREQUE but the full word FREQUENCY may be sent as the redundant NCY at the end will be ignored.

Fields within a command are delimited by comma, multiple commands can be sent on one line delimited with a semi-colon. Eg.

FQREF,CURRENT;POWER?

Mandatory commands specified in the IEEE488.2 protocol have been implemented, (e.g. \*IDN?, \*RST) and all commands that expect a reply are terminated with a question mark (query).

The instrument maintains an error status byte consistent with the requirements of the IEEE488.2 protocol (called the standard event status register) that can be read by the mandatory command \*ESR? (See section 2).

The instrument also maintains a status byte consistent with the requirements of the IEEE488.2 protocol, that can be read either with the IEEE488 serial poll function or by the mandatory command \*STB? over RS232 or IEEE or LAN (see section 2).

The IEEE address defaults to 23 and can be changed via the COMMS menu.

The keyboard is disabled when the instrument is set to "remote" using the IEEE. Press HOME to return to "local" operation.

RS232 data format is: start bit, 8 data bits (no parity), 1 stop bit. Flow control is RTS/CTS (see section 1.3), baud rate is selectable via the MONITOR menu.

A summary of the available commands is given in the Appendix. Details of each command are given in the communication command section of the manual.

Commands are executed in sequence except for two special characters that are immediately obeyed:

- Control T (20) – reset interface (device clear)
- Control U (21) – warm restart



## 1.1 Standard event status register

|     |  |     |     |     |     |  |     |
|-----|--|-----|-----|-----|-----|--|-----|
| PON |  | CME | EXE | DDE | QYE |  | OPC |
|-----|--|-----|-----|-----|-----|--|-----|

- bit 0 OPC (operation complete)  
cleared by most commands  
set when data available or sweep complete
- bit 2 QYE (unterminated query error)  
set if no message ready when data read
- bit 3 DDE (device dependent error)  
set when the instrument has an error
- bit 4 EXE (execution error)  
set when the command cannot be executed
- bit 5 CME (command interpretation error)  
set when a command has not been recognised
- bit 7 PON (power on event)  
set when power first applied or unit has reset

The bits in the standard event status register except for OPC are set by the relevant event and cleared by specific command (\*ESR?, \*CLS, \*RST). OPC is also cleared by most commands that change any part of the configuration of the instrument (such as MODE or START).

## 1.2 Serial Poll status byte

|  |  |     |     |     |  |  |     |
|--|--|-----|-----|-----|--|--|-----|
|  |  | ESB | MAV | ALA |  |  | RDV |
|--|--|-----|-----|-----|--|--|-----|

- bit 0 RDV (result data available)  
set when results are available to be read as enabled by DAVER
- bit 3 ALA (alarm active)  
set when an alarm is active and enabled by ALARMER
- bit 4 MAV (message available)  
set when a message reply is waiting to be read
- bit 5 ESB (standard event summary bit)  
set if any bit in the standard event status register is set as well as the corresponding bit in the standard event status enable register (set by \*ESE).

### 1.3 RS232 connections

The RS232 port on the instrument uses the same pinout as a standard 9 pin serial port on a PC or laptop (9-pin male 'D' type).

| Pin | Function | Direction           |
|-----|----------|---------------------|
| 1   | DCD      | in (+ weak pull up) |
| 2   | RX data  | in                  |
| 3   | TX data  | out                 |
| 4   | DTR      | out                 |
| 5   | GND      |                     |
| 6   | DSR      | not used            |
| 7   | RTS      | out                 |
| 8   | CTS      | in                  |
| 9   | RI       | not used            |

The instrument will only transmit when CTS (pin 8) is asserted, and can only receive if DCD (pin 1) is asserted. The instrument constantly asserts (+12V) DTR (pin 4) so this pin can be connected to any unwanted modem control inputs to force operation without handshaking. The instrument has a weak pull up on pin 1 as many null modem cables leave it open circuit. In electrically noisy environments, this pin should be driven or connected to pin 4.

To connect the instrument to a PC, use a 9 pin female to 9 pin female null modem cable:

|       |   |       |
|-------|---|-------|
| 1 & 6 | - | 4     |
| 2     | - | 3     |
| 3     | - | 2     |
| 4     | - | 1 & 6 |
| 5     | - | 5     |
| 7     | - | 8     |
| 8     | - | 7     |

## 1.4 Data format

Non integer results are sent as ASCII characters in a scientific format consisting of 5 or 6 digit mantissa plus exponent:

```
+1.2345+E00
+1.23456+E00
```

For higher speed transfer a proprietary binary format can be selected which compresses the data into 4 bytes, each of which is sent with the msb set to distinguish them from ASCII control characters. The data is sent as a 7 bit signed exponent, a mantissa sign, and a 20 bit mantissa:

| byte | data                                                  |
|------|-------------------------------------------------------|
| 1    | 7 bit signed exponent +63 to -64                      |
| 2    | bit 6 = mantissa sign<br>bit 5:0 = mantissa bit 19:14 |
| 3    | mantissa bit 13:7                                     |
| 4    | mantissa bit 6:0                                      |

The value is coded as a binary fraction between 0.5 and 0.9999..., a multiplier of  $2^n$  and a sign ie:

$$\text{Value} = (\text{mantissa} / 2^{20}) \times 2^{\text{exponent}} \times -1^{\text{sign}}$$

| value | equivalent          | hex data transmitted |
|-------|---------------------|----------------------|
| 3.0   | $0.75 \times 2^2$   | 0x82,0xB0,0x80,0x80  |
| 0.1   | $0.8 \times 2^{-3}$ | 0xFD,0xB3,0x99,0xCD  |
| -320  | $-0.625 \times 2^9$ | 0x89,0xE8,0x80,0x80  |

Any valid number would have the msb of the mantissa set; any number without the msb of the mantissa set is zero.

## **2    Communication commands**

**\*CLS**

**\*CLS**

Function:            Clear status

Description:        Clears the *standard event status register*.

Format:             \*CLS

Arguments:         none

Reply:               none

Example:            \*CLS  
                      \*ESR?  
                      0

Notes:

**\*ESE****\*ESE**

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set standard event status enable register.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Description: | Enable which bits of the <i>standard event status register</i> set the ESB bit in the serial poll status byte..                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Format:      | *ESE, value                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Arguments:   | decimal equivalent of bits in standard event status enable register                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Reply:       | can be read by *ESE?                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Example:     | *ESE, 60                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Notes:       | <p>The following bits in the standard event status enable register have been implemented:</p> <ul style="list-style-type: none"> <li>bit 0 OPC (operation complete)</li> <li>bit 2 QYE (unterminated query error)</li> <li>bit 3 DDE (device dependent error)</li> <li>bit 4 EXE (execution error)</li> <li>bit 5 CME (command interpretation error)</li> <li>bit 7 PON (power on event)</li> </ul> <p>For example, *ESE, 60 enables all the error bits so that the ESB bit in the serial poll status byte is set in the event of any error.</p> |

**\*ESR?**

**\*ESR?**

|              |                                                                                  |
|--------------|----------------------------------------------------------------------------------|
| Function:    | Standard event status register query                                             |
| Description: | Returns the contents of the <i>standard event status register</i> and clears it. |
| Format:      | *ESR?                                                                            |
| Arguments:   | none                                                                             |
| Reply:       | decimal equivalent of bits in standard event status register                     |
| Example:     | *ESR?<br>33                                                                      |
| Notes:       | The following bits in the standard event status register have been implemented:  |

bit 0 OPC (operation complete)  
 bit 2 QYE (unterminated query error)  
 bit 3 DDE (device dependent error)  
 bit 4 EXE (execution error)  
 bit 5 CME (command interpretation error)  
 bit 7 PON (power on event)

For example, if a command is sent incorrectly and is not recognised, the CME bit will be set and the value of 33 will be returned.

**\*IDN?**

**\*IDN?**

|              |                                                                                  |
|--------------|----------------------------------------------------------------------------------|
| Function:    | Identify query                                                                   |
| Description: | Returns a standard format identification string.                                 |
| Format:      | *IDN?                                                                            |
| Arguments:   | none                                                                             |
| Reply:       | An ASCII string in the IEEE488.2 format:<br>manufacturer,model,serial no,version |
| Example:     | *IDN?<br>NEWTONS4TH,5530, 01234,1.78                                             |
| Notes:       |                                                                                  |



**\*OPC?**

**\*OPC?**

|              |                                                                                               |
|--------------|-----------------------------------------------------------------------------------------------|
| Function:    | Test for operation complete                                                                   |
| Description: | Returns 1 if previous operation is completed, 0 if not.                                       |
| Format:      | *OPC?                                                                                         |
| Arguments:   | none                                                                                          |
| Reply:       | 0 or 1                                                                                        |
| Example:     | START<br>*OPC?<br>0<br>*OPC?<br>0<br>*OPC?<br>1                                               |
| Notes:       | *OPC? can be used to indicate when data is available or when a frequency sweep has completed. |

**\*RST**

**\*RST**

|              |                                                                                                                                                                                               |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Reset                                                                                                                                                                                         |
| Description: | Resets the instrument to the default state and clears the <i>standard event status register</i> .                                                                                             |
| Format:      | *RST                                                                                                                                                                                          |
| Arguments:   | none                                                                                                                                                                                          |
| Reply:       | none                                                                                                                                                                                          |
| Example:     | *RST                                                                                                                                                                                          |
| Notes:       | <p>The *RST command loads the default configuration. This is the same as loading the default configuration via the PROGRAM menu.</p> <p>Any preceding setup commands will be overwritten.</p> |

**\*SRE**

**\*SRE**

Function: Set service request enable register.

Description: Enable which bits of the *status byte register* initiate a service request.

Format: \*SRE, value

Arguments: decimal equivalent of bits in status byte register

Reply: can be read by \*SRE?

Example: \*SRE, 1  
generate a service request when data available.

Notes:

**\*SRE?**

**\*SRE?**

Function: Read service request enable register.

Description: Read back the present setting of the service request enable register.

Format: \*SRE?

Arguments:

Reply: decimal equivalent of bits in status byte register that would generate a service request.

Example: \*SRE?  
1

Notes:

**\*STB?**

**\*STB?**

|              |                                                                                                                                                                                                                               |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Read serial poll status byte                                                                                                                                                                                                  |
| Description: | Returns the decimal value of the serial poll status byte.                                                                                                                                                                     |
| Format:      | *STB?                                                                                                                                                                                                                         |
| Arguments:   | none                                                                                                                                                                                                                          |
| Reply:       | decimal value of the serial poll status byte                                                                                                                                                                                  |
| Example:     | *STB?<br>1                                                                                                                                                                                                                    |
| Notes:       | The following bits in the serial poll status register have been implemented:<br><br>bit 0 RDV (results data available)<br>bit 3 ALA (alarm active)<br>bit 4 MAV (message available)<br>bit 5 ESB (standard event summary bit) |

**\*TRG**

**\*TRG**

|              |                                                              |
|--------------|--------------------------------------------------------------|
| Function:    | Trigger                                                      |
| Description: | Initiates a new measurement, resets the range and smoothing. |
| Format:      | *TRG                                                         |
| Arguments:   | none                                                         |
| Reply:       | none                                                         |
| Example:     | MODE,VRMS<br>*TRG<br>VRMS,SURG?                              |
| Notes:       |                                                              |

**\*TST?**

**\*TST?**

|              |                                                                                                                                                                                                                                                                                                                                             |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Self test query                                                                                                                                                                                                                                                                                                                             |
| Description: | Returns the results of self test                                                                                                                                                                                                                                                                                                            |
| Format:      | *TST?                                                                                                                                                                                                                                                                                                                                       |
| Arguments:   | none                                                                                                                                                                                                                                                                                                                                        |
| Reply:       | single integer<br>bit 0 – set if uncalibrated<br>bit 1 – set if DSP zero error<br>bit 2 – set if DSP run error<br>bit 3 – not used<br>bit 4 – System error, FPA initialisation<br>bit 5 – System error, DSP RAM<br>bit 6 – System error, DSP run<br>bit 7 – System error, external RAM<br>bits 8 – 14 not used<br>> 15 – major system error |
| Example:     | *TST?<br>0                                                                                                                                                                                                                                                                                                                                  |

Notes:

**\*WAI**

**\*WAI**

Function: Wait for operation complete

Description: Suspends communication until the previous operation has completed

Format: \*WAI

Arguments: none

Reply: none

Example: \*TRG  
\*WAI  
POWER,PHASE1?

Notes:



## **ABORT**

## **ABORT**

Function: Abort datalog  
Description: Abort datalog data acquisition.  
Format: ABORT  
Arguments: none  
Reply: none  
Example: DATALOG, RAM, 0.02  
START  
*wait for data values*  
ABORT

Notes:

**ADIMAP****ADIMAP**

|              |                                                                                                                   |
|--------------|-------------------------------------------------------------------------------------------------------------------|
| Function:    | Map multilog parameters to outputs                                                                                |
| Description: | Applies offset and scaling to a multilog value and maps value to chosen ADI output                                |
| Format:      | ADIMAP,output,multilog,offset,scale                                                                               |
| Arguments:   | output:<br>1-20<br>multilog:<br>1-64<br>offset:<br>Float<br>scale:<br>Float                                       |
| Reply:       | None                                                                                                              |
| Example:     | MULTIL,0<br>MULTIL,2,1,1      (PH1 Frequency)<br>ADIMAP,1,2,0.2,0.5<br><br>Output 1 = 0.5 * (PH1 frequency - 0.2) |
| Notes:       | Offset is subtracted from multilog value, then scale is applied within the limits of +/- 10                       |

## **ALARM**

## **ALARM**

Function: Set common controls for alarm1 and alarm2.

Description: Set the alarm latch and sounder control.

Format: *ALARM,latch,sounder*

Arguments: latch:  
              ON  
              OFF  
          sounder:  
              ENABLED  
              DISABLED

Reply: none

Example: ALARM,ON,DISABLED

Notes:

## ALARM?

## ALARM?

|              |                                                                                                                                                               |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Read alarm status.                                                                                                                                            |
| Description: | Reads the status of the measurements and 2 alarms.                                                                                                            |
| Format:      | ALARM?                                                                                                                                                        |
| Arguments:   | none                                                                                                                                                          |
| Reply:       | single integer <ul style="list-style-type: none"> <li>bit 0 data available</li> <li>bit 1 data error</li> <li>bit 2 alarm 1</li> <li>bit 3 alarm 2</li> </ul> |
| Example:     | ALARM?<br>1                                                                                                                                                   |
| Notes:       | An alarm is present if bit 0 is high (data is available) and either alarm 1 or alarm 2 bits are high.                                                         |

## ALARM1

## ALARM1

|              |                                                                                                                                    |
|--------------|------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set parameters for alarm1.                                                                                                         |
| Description: | Set alarm1 type and thresholds.                                                                                                    |
| Format:      | <i>ALARM1,type,data,high,low</i>                                                                                                   |
| Arguments:   | type:<br>DISABLED<br>HIGH<br>LOW<br>INSIDE<br>OUTSIDE<br>LINEAR<br>data<br>1-4<br>high:<br>high threshold<br>low:<br>low threshold |
| Reply:       | none                                                                                                                               |
| Example:     | ALARM1,HIGH,1,2,0                                                                                                                  |
| Notes:       | Both thresholds must be sent even if only one is used.                                                                             |

## ALARM2

## ALARM2

|              |                                                                                                                                        |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set parameters for alarm2.                                                                                                             |
| Description: | Set alarm2 type and thresholds.                                                                                                        |
| Format:      | <i>ALARM2,type,data,high,low</i>                                                                                                       |
| Arguments:   | type:<br>DISABLED<br>HIGH<br>LOW<br>INSIDE<br>OUTSIDE<br>data<br>1-4 for zoom data<br>high:<br>high threshold<br>low:<br>low threshold |
| Reply:       | None                                                                                                                                   |
| Example:     | ALARM2,LOW,3,0,0.5                                                                                                                     |
| Notes:       | Both thresholds must be sent even if only one is used.<br>There is no LINEAR option for alarm 2.                                       |

**ALARME****ALARME**

|              |                                                                                                                                                        |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set alarm status enable register                                                                                                                       |
| Description: | Sets bits in the alarm status enable register to control which alarm bit if any set the alarm active bits in the status byte.                          |
| Format:      | ALARME, <i>value</i>                                                                                                                                   |
| Arguments:   | decimal equivalent of alarm bits<br>bit2 set bit 3 of status byte when<br>alarm 1 is active<br>bit3 set bit 3 of status byte when<br>alarm 2 is active |
| Reply:       | none                                                                                                                                                   |
| Example:     | ALARME, 12<br>*SRE,8<br>set bit 3 in status byte when either alarm<br>1 or alarm 2 is active and generate a<br>service request                         |
| Notes:       | default value is 0                                                                                                                                     |

**ALARME?**

**ALARME?**

Function: Read alarm status enable register

Description: Read back present bits in the alarm status enable register which controls the alarm active bit in the status byte.

Format: ALARME?

Arguments: none

Reply: decimal equivalent of alarm bits

Example: ALARME?  
12

Notes:



## **ANALOG**

## **ANALOG**

Function: Interface with ADI40

Description: Write to individual ADI40 outputs

Format: *ANALOG,channel,value*

Arguments: Channel:  
              1-20  
          Value:  
              -10.00 to +10.00

Reply: None

Example: *ANALOG,5,-3.14*

Notes: Up to 9 outputs can be written to with one CommView transfer, by separating each instance with a ";".

**ANALOG?**

**ANALOG?**

|              |                                                                                                   |
|--------------|---------------------------------------------------------------------------------------------------|
| Function:    | Interface with ADI40                                                                              |
| Description: | Read from individual ADI40 inputs                                                                 |
| Format:      | ANALOG,channel?                                                                                   |
| Arguments:   | Channel:<br>1-20                                                                                  |
| Reply:       | ASCII characters in scientific format:<br>1 - 16 in Volts<br>17- 20 in °C                         |
| Example:     | ANALOG,12?                                                                                        |
| Notes:       | Up to 9 inputs can be read back at once with this command by separating each instance with a ";". |

**APPLIC****APPLIC**

Function: Select application mode.

Description: Some applications require special settings within the instrument for optimum measurement

Format: *APPLIC,type,setting*

Arguments: type:

|         |                         |
|---------|-------------------------|
| NORMAL  |                         |
| PWM     | (PWM Motor Drive)       |
| BALLAST | (Lighting ballast)      |
| INRUSH  | (Inrush Current)        |
| POWERT  | (Transformer mode)      |
| STANDB  | (Standby power)         |
| CALIBR  | (Calibration)           |
| IEC610  | (IEC Harmonics/Flicker) |
| TVF105  | (Aircraft TVF105)       |
| CAPTURE | (Capture / Raw Data)    |

setting:

|                          |
|--------------------------|
| filter 0-2 (PWM only)    |
| 0: 4kHz                  |
| 1: 1kHz                  |
| 2: 250Hz                 |
| speed 0-3 (ballast only) |
| 0: fixed time            |
| 1: fast                  |
| 2: medium                |
| 3: slow                  |

Reply: none

Example: *APPLIC,POWERT*  
*APPLIC,PWM,1*

Notes:

**BANDWI****BANDWI**

Function: Select bandwidth.

Description: The analogue bandwidth of the instrument can be selected as "wide" (to 3MHz). For low noise measurements at low frequency the bandwidth can be restricted to "low" (to 40kHz). For measurements of dc in the presence of large ac signal, the bandwidth can be further restricted to "dc only" (to 10Hz).

Format: BANDWI,*phase,type*

Arguments: phase:  
            PHASE1  
            PHASE2  
            PHASE3  
type:  
            WIDE  
            LOW  
            DCONLY

Reply: none

Example: BANDWI,WIDE

Notes: Only use DCONLY to improve accuracy of measurement of small dc in the presence of a large ac signal. For normal dc measurements use bandwidth = LOW.

**BANDWI?**

**BANDWI?**

Function: Read bandwidth setting.

Description: Returns a numerical value for the bandwidth setting.

Format: BANDWI,*phase?*

Arguments: phase:  
            PHASE1  
            PHASE2  
            PHASE3

Reply: 0 = WIDE  
       1 = LOW  
       2 = DONLY

Example: BANDWI,PHASE3,LOW  
          BANDWI,PHASE3?  
          1

Notes: If independent input control has not been enabled then the setting for phase 1 is used for all phases.

**BEEP**

**BEEP**

Function:            Sound the buzzer

Description:        Makes a “beep” from the instrument.

Format:             BEEP

Arguments:         none

Reply:               none

Example:            BEEP

Notes:

**BLANKI**

**BLANKI**

Function: Select blanking

Description: Enable or disable low value blanking.

Format: BLANKI,*value*

Arguments: value:  
            ON  
            OFF

Reply: none

Example: BLANKI,OFF

Notes:

**CALSTR?****CALSTR?**

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Read back the N4L last calibration string.                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Description: | When calibrated at N4L, the instrument stores a text string which can be read on the front panel (press SYS and LEFT to display the System menu and refer to N4L Last Calibration). This shows the date of calibration. Users who subsequently verify the accuracy using a local calibration facility can choose have details of the local calibration displayed instead. The original N4L string is not overwritten but the alternative local calibration string is displayed instead. |
| Format:      | CALSTR?                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Arguments:   | none                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Reply:       | alphanumeric string                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Example:     | CALSTR?<br>12_AUG_2020_1055_AMW                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Notes:       | CALSTR? Will read back the most recent N4L last calibration string including on instruments that are displaying details of a more recent local calibration.                                                                                                                                                                                                                                                                                                                             |



**CALVER?**

**CALVER?**

Function: Read back the Local calibration string.

Description: When calibrated using an external calibration facility details of the calibration can be stored on the instrument. This text string can be read on the front panel (press SYS and LEFT to display the System menu and refer to Local Calibration). This shows the date of the local calibration. The original N4L string is not overwritten but the alternative local calibration string is displayed instead.

Format: CALVER?

Arguments: none.

Reply: alphanumeric string

Example: CALVER?  
12\_DEC\_2008\_AMW

Notes: CALVER? Will read back the most recent local calibration string. The string will be blank if no local calibration has been performed or no information was entered when the local calibration was performed.

## **CAPTUR?**

## **CAPTUR?**

Function: Read back Capture mode data.

Description: Returns captured oscilloscope data. Data is returned in 200 lines of 250 values per channel. The data capture is triggered on the falling edge.

Format: CAPTUR?  
or: CAPTUR,EXTTRGG?

Arguments: none

Reply: Multiple data values.

Example: CAPTUR?  
Data is captured using the PPA's Internal Trigger.

CAPTUR,EXTTRGG?  
Data is captured using the PPA's External Trigger.

Notes: This command only applies to PPA5512 and PPA5532 firmware. Capture mode operates as a sub function of the normal oscilloscope mode – When “capture mode” is enabled in the menu data is stored in a 50000 byte circular buffer per channel. Set the trigger mode to single shot and trigger as normal. Sending the CAPTUR? command reads this data.

Each line of data should return as follows:

```
[#3503] [h1][h2][d1.1][d1.2][d2.1] [2.2]  
.....[d250.1][d250.2] [error] [CR] [LF]
```

Each line consists of:

- 5 bytes that represent #3503 (ASCII)
- 2 bytes that represent the Header bits including channel number [h1][h2]
- 500 bytes that represent the actual data.

250 pieces of data each made up of 2 bytes. d1.1 is data 1 bit 1, d1.2 is data 1 bit 2, d2.1 is data 2 bit 1, d2.2 is data 2 bit 2 etc.

- 1 byte that represents the error checking bit [error].

- 1 byte that represents Carriage return [CR].

- 1 byte that represents Line Feed [LF]

Each 8 bit byte has the msb set in order to prevent any misinterpretation of data within drivers and software which otherwise could mistake data for carriage return etc. so 14 bit data values are returned.

**CONFIG****CONFIG**

|              |                                                                                                                                                    |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Direct access of configuration parameters                                                                                                          |
| Description: | Sets configuration parameter for which there may not be a direct command.                                                                          |
| Format:      | <i>CONFIG,index,data</i>                                                                                                                           |
| Arguments:   | index is the number of the parameter<br>data is the data for that parameter                                                                        |
| Reply:       | none                                                                                                                                               |
| Example:     | CONFIG,6,1    (set phase convention)                                                                                                               |
| Notes:       | The list of configurable parameters is given in the appendix.<br>CONFIG goes through the same limit checking as when entering data from the menus. |

## CONFIG?

## CONFIG?

|              |                                                                                               |
|--------------|-----------------------------------------------------------------------------------------------|
| Function:    | Configurable parameter query                                                                  |
| Description: | Reads the present value of a single parameter.                                                |
| Format:      | CONFIG, <i>index</i> ?                                                                        |
| or:          | CONFIG? <i>index</i>                                                                          |
| Arguments:   | <i>index</i> is the parameter number                                                          |
| Reply:       | Value of parameter, real or integer as appropriate.                                           |
| Example:     | CONFIG,6? (read phase convention)<br>0<br>CONFIG,6,1 (set phase convention)<br>CONFIG,6?<br>1 |
| Notes:       | The list of configurable parameters is given in the appendix.                                 |

## COUPLI

## COUPLI

|              |                                                                                                                                |
|--------------|--------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set ac or ac+dc coupling.                                                                                                      |
| Description: | Selects the input coupling for a given input channel.                                                                          |
| Format:      | COUPLI, <i>phase,coupling</i>                                                                                                  |
| Arguments:   | phase:<br>PHASE1<br>PHASE2<br>PHASE3<br>coupling:<br>AC+DC<br>ACONLY<br>DCONLY                                                 |
| Reply:       | none                                                                                                                           |
| Example:     | COUPLI,PHASE2,AC+DC                                                                                                            |
| Notes:       | In multi phase applications, the coupling on phase 1 is applied to other phases unless "independent input control" is enabled. |

## COUPLI?

## COUPLI?

|              |                                                                                                                                |
|--------------|--------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Read ac/dc coupling setting.                                                                                                   |
| Description: | Returns a numerical value for the coupling setting.                                                                            |
| Format:      | COUPLI, <i>phase,coupling</i>                                                                                                  |
| Arguments:   | phase:<br>PHASE1<br>PHASE2<br>PHASE3                                                                                           |
| Reply:       | 0 = AC+DC<br>1 = ACONLY<br>2 = DCONLY                                                                                          |
| Example:     | COUPLI,PHASE2,AC+DC<br>COUPLI,PHASE2?<br>0                                                                                     |
| Notes:       | In multi phase applications, the coupling on phase 1 is applied to other phases unless "independent input control" is enabled. |

**DATALO****DATALO**

|              |                                                                                                                                                                                                                               |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set up datalog                                                                                                                                                                                                                |
| Description: | Sets datalog parameters or accesses datalog non-volatile store.                                                                                                                                                               |
| Format:      | <i>DATALO,function,interval,speed</i>                                                                                                                                                                                         |
| Arguments:   | function:<br>DISABLE<br>RAM<br>NONVOL<br>RECALL<br>DELETE<br>interval:<br>datalog interval in seconds<br>speed:<br>HIGH                                                                                                       |
| Reply:       | none                                                                                                                                                                                                                          |
| Example:     | DATALOG, NONVOL, 10<br>DATALOG, RAM, 0, HIGH                                                                                                                                                                                  |
| Notes:       | set interval to 0 to record every measurement as fast as possible.<br>Set HIGH to select high speed mode for any combination of W, VA, VAr, pf, Vrms, Arms, and frequency. If HIGH is not sent then high speed mode is reset. |



**DATALO?****DATALO?**

|              |                                                                                                                                                                                |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Read back datalog results                                                                                                                                                      |
| Description: | Return datalog values, one record per line, or the number of lines available                                                                                                   |
| Format:      | DATALO, <i>start,records?</i><br>DATALO,0?<br>DATALO,LINES?                                                                                                                    |
| Arguments:   | start:<br>first record to return<br>records:<br>number of records to return<br>0:<br>return all new records since last read                                                    |
| Reply:       | 3 to 6 data values depending on settings:<br>index 1-n<br>elapsed time in hours<br>data1<br>data2 (if stored)<br>data3 (if stored)<br>data4 (if stored)<br>one record per line |
| Example:     | DATALOG,NONVOL,10<br>START<br>wait for datalog<br>STOP<br>DATALOG,LINES?<br>30<br>DATALOG,21,3?<br>21,2.0000E-1,1.2345E0<br>22,2.1000E-1,5.6789E3<br>23,2.2000E-1,1.2345E0     |
| Notes:       | if no arguments are sent then DATALOG?<br>returns all the available lines of data                                                                                              |

## DAV?

## DAV?

Function: Data available query

Description: Returns data availability status.

Format: DAV?

Arguments: none

Reply: Decimal equivalent of data available bits:  
           bit0 new data available  
           bit1 data available  
           bit2 harmonic series data available  
           bit6 integration data available  
           bit7 datalog data available

Example: SPEED,SLOW  
           \*TRG  
           DAV?  
           0  
           DAV?  
           0  
           DAV?  
           0  
           DAV?  
           3               (data available)

Notes: DAV? does not modify the status bits.

**DAVER****DAVER**

|              |                                                                                                                                                         |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set data available enable register                                                                                                                      |
| Description: | Sets bits in the data available enable register to control which status bits set the data available bits in the status byte.                            |
| Format:      | DAVER, <i>value</i>                                                                                                                                     |
| Arguments:   | decimal equivalent of data available bits<br>bit0 set bit 0 of status byte when new data available<br>bit1 set bit 0 of status byte when data available |
| Reply:       | none                                                                                                                                                    |
| Example:     | DAVER, 1<br>set bit 0 in status byte when new data is available                                                                                         |
| Notes:       | default value is 2:<br>bit 0 of status byte is set whenever data is available.                                                                          |

**DAVER?**

**DAVER?**

Function: Read data available enable register

Description: Read back present setting of the data available enable register, which controls the status bits that set the data available bits in the status byte.

Format: DAVER?

Arguments: none

Reply: decimal equivalent of bits

Example: DAVER?  
4

Notes:

## DISPLAY

## DISPLAY

|              |                                                                                                                     |
|--------------|---------------------------------------------------------------------------------------------------------------------|
| Function:    | Set the display page                                                                                                |
| Description: | Selects the page on the display so that the zoom data can be used for alarms.                                       |
| Format:      | DISPLAY, <i>page</i>                                                                                                |
| Arguments:   | page:<br>PHASE1<br>PHASE2<br>PHASE3<br>SUM<br>NEUTRAL<br>TOTAL<br>FUNDAMENTAL<br>VOLTAGE<br>CURRENT                 |
| Reply:       | None                                                                                                                |
| Example:     | DISPLAY,FUNDAMENTAL                                                                                                 |
| Notes:       | VOLTAGE is the same as TOTAL;<br>CURRENT is the same as FUNDAMENTAL.<br>They refer to the multiphase display modes. |

**DISPLAY?**

**DISPLAY?**

|              |                                                    |
|--------------|----------------------------------------------------|
| Function:    | Read the displayed data                            |
| Description: | Returns all the values presently on the screen.    |
| Format:      | DISPLAY?                                           |
| Arguments:   | none                                               |
| Reply:       | Multiple floating point values separated by commas |
| Example:     | DISPLAY?                                           |
| Notes:       |                                                    |

## EFFICI

## EFFICI

|              |                                                                                                                                                                                                            |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set efficiency calculation                                                                                                                                                                                 |
| Description: | Selects the data to be used for the efficiency calculation.                                                                                                                                                |
| Format:      | EFFICI, <i>formula</i>                                                                                                                                                                                     |
| Arguments:   | formula:<br>0 – disabled<br>1 – phase 1 / phase 2<br>2 – phase 2 / phase 1<br>3 – slave / master<br>4 – master /slave<br>5 – mechanical sum<br>6 – sum / mechanical<br>7 – phase 3 / sum<br>8 – sum /phase |
| Reply:       | none                                                                                                                                                                                                       |
| Example:     | EFFICIENCY,2                                                                                                                                                                                               |
| Notes:       |                                                                                                                                                                                                            |

**EFFICI?**

**EFFICI?**

Function: Read efficiency result

Description: Reads back the total and fundamental efficiency results.

Format: EFFICI?

Arguments: none

Reply: 2 data values separated by commas:  
total, fundamental

Example: EFFICI?  
data returned

Notes:



## **FAST**

## **FAST**

Function: Set fast communications mode.

Description: Disables the screen drawing for high speed operation.

Format: FAST,*value*

Arguments: value:  
ON  
OFF

Reply: none

Example: FAST,ON

Notes: FAST mode does not suppress the data acquisition which continues in the background. See SUSPEND to disable all non-communication functions.

## FQLOCK

## FQLOCK

|              |                                                                                                                                                                                                                                                                                      |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Lock frequency.                                                                                                                                                                                                                                                                      |
| Description: | Set the technique for determining the frequency for analysis.                                                                                                                                                                                                                        |
| Format:      | <i>FQLOCK,value,frequency</i>                                                                                                                                                                                                                                                        |
| Arguments:   | <p>value:</p> <ul style="list-style-type: none"> <li>ON</li> <li>OFF</li> <li>NORMAL</li> <li>CONSTANT</li> <li>DYNAMIC</li> </ul> <p>frequency (optional)</p> <ul style="list-style-type: none"> <li>CONSTANT - enter frequency</li> <li>DYNAMIC-enter minimum frequency</li> </ul> |
| Reply:       | none                                                                                                                                                                                                                                                                                 |
| Example:     | <p>FQLOCK,ON</p> <p>FQLOCK,Dynamic,100</p>                                                                                                                                                                                                                                           |
| Notes:       | <p>FQLOCK,CONSTANT</p> <p>Without an argument locks the frequency to the present value.</p> <p>ON is the same as CONSTANT</p> <p>OFF is the same as NORMAL</p> <p>When Dynamic is selected the minimum frequency can be set between 0.010Hz (10mHz) and 500Hz.</p>                   |

**FQREF****FQREF**

|              |                                                                                                                                                                        |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set frequency reference.                                                                                                                                               |
| Description: | Select the channel to be used for measuring the frequency.                                                                                                             |
| Format:      | <i>FQREF,phase</i><br><i>FQREF,channel</i><br><i>FQREF,phase,channel</i>                                                                                               |
| Arguments:   | channel:<br>voltage<br>current<br>Speed<br>Ac Line<br><br>phase:<br>PHASE1<br>PHASE2<br>PHASE3                                                                         |
| Reply:       | none                                                                                                                                                                   |
| Example:     | FQREF,CURRENT                                                                                                                                                          |
| Notes:       | Measured phase is always referred to phase 1 voltage no matter what channel is selected to measure the frequency, unless phase 1 is not active (eg phase 2 only mode). |

**FREQFI****FREQFI**

|              |                                                                                                                               |
|--------------|-------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set the frequency filter                                                                                                      |
| Description: | Selects a filter to be applied to the data used for frequency measurement to help synchronise in noisy environments.          |
| Format:      | FREQFI, <i>value</i>                                                                                                          |
| Arguments:   | value:<br>ON<br>OFF                                                                                                           |
| Reply:       | none                                                                                                                          |
| Example:     | FREQFI,ON                                                                                                                     |
| Notes:       | The filter is applied only to the data used for frequency measurement and does not change the data used for the measurements. |

**FREQUE****FREQUE**

|              |                                                                                                 |
|--------------|-------------------------------------------------------------------------------------------------|
| Function:    | Set the analysis frequency                                                                      |
| Description: | Sets the analysis frequency in Hz for frequency lock mode.                                      |
| Format:      | FREQUE, <i>frequency</i>                                                                        |
| Arguments:   | frequency in Hz                                                                                 |
| Reply:       | none                                                                                            |
| Example:     | FQLOCK,ON<br>FREQUE,5e4      (set frequency to 50kHz)                                           |
| Notes:       | Lock the frequency with FQLOCK,ON before sending the desired frequency with the FREQUE command. |

**FSD?**

**FSD?**

Function: Read the full scale of all input channels at once or that of an individually selected input channel.

Description: Returns the full scale value for all channels or that of a single selected channel.

Format: FSD?  
FSD,CH?

Arguments: None  
CH1, CH2, CH3, CH4, CH5, CH6

Reply: Up to six data values separated by commas

Example 1: FSD?  
Data returned, data returned, data returned, data returned, data returned, data returned

Example 2: FSD,CH1?  
Data returned

Notes: Number of channels that can be read and the number of data values returned is dependent on the number of phases selected in the instruments settings.  
CH1 = PH1: Voltage Input  
CH2 = PH1: Current Input  
CH3 = PH2: Voltage Input  
CH4 = PH2: Current Input  
CH5 = PH3: Voltage Input  
CH6 = PH3: Current Input

**HARMON****HARMON**

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|------------------------|------|---------------------|-----|----------------------------|-----|---------------------------|-----|-------------------------|-----|------------------------|--------|-----------------------|--------|---------------------|------|--------------|-------|----------------|
| Function:    | Set harmonic analyser mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| Description: | Set harmonic analyser mode and parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| Format:      | <i>HARMON,para,harmonic,max,stepsize</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| Arguments:   | <p>para:</p> <table> <tr><td>THDD</td><td>difference formula THD</td></tr> <tr><td>THDS</td><td>harmonic series THD</td></tr> <tr><td>TIF</td><td>Telephone Influence Factor</td></tr> <tr><td>THF</td><td>Telephone Harmonic Factor</td></tr> <tr><td>TDD</td><td>Total Demand Distortion</td></tr> <tr><td>TRD</td><td>Total Rated Distortion</td></tr> <tr><td>HPHASE</td><td>Series harmonic phase</td></tr> <tr><td>INTERH</td><td>Interharmonic sweep</td></tr> <tr><td>HRMS</td><td>Harmonic RMS</td></tr> <tr><td>PH-PH</td><td>phase to phase</td></tr> </table> <p>harmonic:</p> <p>individual harmonic for display</p> <p>max:</p> <p>length of harmonic series</p> <p>stepsize:</p> <p>frequency step size (0.5Hz – 100Hz)</p> | THDD | difference formula THD | THDS | harmonic series THD | TIF | Telephone Influence Factor | THF | Telephone Harmonic Factor | TDD | Total Demand Distortion | TRD | Total Rated Distortion | HPHASE | Series harmonic phase | INTERH | Interharmonic sweep | HRMS | Harmonic RMS | PH-PH | phase to phase |
| THDD         | difference formula THD                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| THDS         | harmonic series THD                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| TIF          | Telephone Influence Factor                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| THF          | Telephone Harmonic Factor                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| TDD          | Total Demand Distortion                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| TRD          | Total Rated Distortion                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| HPHASE       | Series harmonic phase                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| INTERH       | Interharmonic sweep                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| HRMS         | Harmonic RMS                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| PH-PH        | phase to phase                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| Reply:       | none                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| Example:     | HARMON,TRD<br>HARMON,THDS,3,50<br>HARMON,INTERH,3,7500,20                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |
| Notes:       | It is not necessary to send any arguments, but if any are sent they must be in the specified order.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |      |                        |      |                     |     |                            |     |                           |     |                         |     |                        |        |                       |        |                     |      |              |       |                |

PH-PH sets the conversion from normal to PH-PH measurement (Harmonic menu options). It is reset by any THD command.

The maximum value for length of harmonic series is as follows:

100 for harmonic factor, harmonic RMS, TIF, THF, TDD and TRD.

125 for Harmonic Series and Series Harmonic Phase.

9999 for Interharmonic sweep.

The stepsize argument only applies to Interharmonic Sweep.



## HARMON?

## HARMON?

|              |                                                                                                                                                                     |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Harmonic analyser query                                                                                                                                             |
| Description: | Read harmonic results.<br>Sets harmonic analyser mode if not already set.<br>Waits for next unread data if necessary.<br>Clears new data available bit read by DAV? |
| Format:      | HARMON?                                                                                                                                                             |
| or:          | HARMON, <i>phase</i> ?                                                                                                                                              |
| or:          | HARMON,SERIES?                                                                                                                                                      |
| or:          | HARMON, <i>phase</i> ,SERIES?                                                                                                                                       |
| Arguments:   | phase:<br>PHASE1<br>PHASE2<br>PHASE3<br>NEUTRAL<br>PHASES                                                                                                           |
| Reply:       | 11 data values separated by commas:<br>freq,mag1,mag2,hmag1,hmag2,h%1,<br>h%2,thd%1,thd%2,hphase1,hphase2                                                           |
| or:          | magnitude and percentage for each harmonic, one channel per line                                                                                                    |
| or:          | magnitude and phase for each harmonic, one channel per line                                                                                                         |
| Example:     | HARMON,PHASE2?<br>data returned                                                                                                                                     |
| Notes:       | HARMON? waits for next unread data.                                                                                                                                 |

**HOLD****HOLD**

Function: Set data hold

Description: Turns data hold on or off. Useful for reading data from different phases without it being changed between reads.

Format: HOLD,state

Arguments: State:  
ON  
OFF

Reply: none

Example: HOLD,ON  
POWER,PHASE1,WATTS?  
POWER,PHASE2,WATTS?  
POWER,PHASE3,WATTS?  
HOLD,OFF

Notes:

**INPUT****INPUT**

Function: Set input mode

Description: Selects the input type of the instrument

Format: *INPUT,channel,type*

Arguments: channel:  
            CH1  
            CH2  
          type:  
            INTERN  
            EXTATT  
            EXTSHU

Reply: none

Example: INPUT,CH1,EXTSHU

Notes: CH1 applies to all voltage channels  
       CH2 applies to all current channels

**INTEGR****INTEGR**

|              |                                                                                                                                                                                                                                                |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set integrated power mode.                                                                                                                                                                                                                     |
| Description: | <p>Set integrated power mode, whether the integration for Watts and current use signed or unsigned values, and whether accumulated or averaged values are computed.</p> <p>Also sets up run time for integration over a specific interval.</p> |
| Format:      | <p><i>INTEGR,type,display</i></p> <p><i>INTEGR,RUNTIM,hours,minutes</i></p>                                                                                                                                                                    |
| Arguments:   | <p>type:</p> <p>    SIGNED</p> <p>    MAGNITUDE</p> <p>display:</p> <p>    TOTAL</p> <p>    AVERAGE</p> <p>hours:</p> <p>    integer</p> <p>minutes:</p> <p>    integer</p>                                                                    |
| Reply:       | none                                                                                                                                                                                                                                           |
| Example:     | INTEGR,MAGNITUDE,TOTAL                                                                                                                                                                                                                         |
| Notes:       |                                                                                                                                                                                                                                                |

## INTEGR?

## INTEGR?

|              |                                                                                              |
|--------------|----------------------------------------------------------------------------------------------|
| Function:    | Read integrated power mode.                                                                  |
| Description: | Read integrated power mode for the selected phase.                                           |
| Format:      | INTEGR, <i>phase?</i>                                                                        |
| Arguments:   | phase:<br>PHASE1<br>PHASE2<br>PHASE3<br>PHASES<br>SUM                                        |
| Reply:       | 13 values separated by commas<br>time,Wh,WH.f,VAh,VAh.f,VArh,Varh.f<br>pf,pf.f,V,V.f,Ah,Ah.f |
| Example:     | START<br>wait for integration time<br>INTEGR,PHASE1?<br>data returned                        |
| Notes:       | INTEGR? without specifying the phase returns the appropriate single phase data.              |

## KEYBOA

## KEYBOA

|              |                                                                                    |
|--------------|------------------------------------------------------------------------------------|
| Function:    | Disable front panel keyboard.                                                      |
| Description: | The front panel keyboard can be disabled to prevent accidental operation.          |
| Format:      | KEYBOARD, <i>value</i>                                                             |
| Arguments:   | value:<br>ENABLE<br>DISABLE                                                        |
| Reply:       | none                                                                               |
| Example:     | KEYBOARD,DISABLE                                                                   |
| Notes:       | The keyboard can be re-enabled from the front panel only by pressing the HOME key. |

## LCR

## LCR

Function: Set LCR meter mode.

Description: Set LCR mode and conditions.

Format: LCR,*parameter*

Arguments: parameter:  
            AUTO  
            CAPACITANCE  
            INDUCTANCE  
            IMPEDANCE

Reply: none

Example: LCR,IMPEDA

Notes:

## LCR?

## LCR?

|              |                                                                                                                                                              |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | LCR meter query                                                                                                                                              |
| Description: | Read LCR meter results.<br>Sets LCR meter mode if not already set.<br>Waits for next unread data if necessary.<br>Clears new data available bit read by DAV? |
| Format:      | LCR, <i>phase?</i>                                                                                                                                           |
| Arguments:   | phase:<br>PHASE1<br>PHASE2<br>PHASE3<br>PHASES                                                                                                               |
| Reply:       | 11 data values separated by commas:<br>freq, Vmag, Amag, impedance,<br>phase, R, C, L, $\tan\delta$ , Qf, reactance                                          |
| Example:     | LCR,IMPEDA<br>LCR,PHASES?<br>data returned                                                                                                                   |
| Notes:       | LCR? waits for next unread data.<br>LCR? without specifying the phase returns the appropriate single phase data.                                             |



## LOWFRE

## LOWFRE

|              |                                                                                                                                                                                    |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set low frequency mode                                                                                                                                                             |
| Description: | Sets the low frequency option for extending the measurement window.                                                                                                                |
| Format:      | LOWFRE, <i>value</i>                                                                                                                                                               |
| Arguments:   | value:<br>ON<br>OFF                                                                                                                                                                |
| Reply:       | none                                                                                                                                                                               |
| Example:     | LOWFRE,ON                                                                                                                                                                          |
| Notes:       | LOWFRE is mainly used for measuring low frequencies (<5 Hz). However, as it applies digital filtering, it may also be useful when analysing any signals below a few hundred Hertz. |

**MODE****MODE**

|              |                                                                                                                                                                             |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set mode                                                                                                                                                                    |
| Description: | Sets the basic operating mode of the instrument.                                                                                                                            |
| Format:      | MODE, <i>type</i>                                                                                                                                                           |
| Arguments:   | type:<br>POWER (power meter)<br>INTEGR (integrator)<br>HARMON (harmonic analyser)<br>RMS (rms voltmeter)<br>LCR (LCR meter)<br>SCOPE (oscilloscope)<br>PHASEM (phase meter) |
| Reply:       | none                                                                                                                                                                        |
| Example:     | MODE,LCR                                                                                                                                                                    |
| Notes:       |                                                                                                                                                                             |

## MSLAVE

## MSLAVE

|              |                                                                                                          |
|--------------|----------------------------------------------------------------------------------------------------------|
| Function:    | Set master/slave mode                                                                                    |
| Description: | Enables the instrument to synchronise with a second instrument to simultaneously measure up to 6 phases. |
| Format:      | MSLAVE, <i>type</i>                                                                                      |
| Arguments:   | type:<br>DISABLE<br>MASTER<br>SLAVE                                                                      |
| Reply:       | none                                                                                                     |
| Example:     | MSLAVE,MASTER                                                                                            |
| Notes:       |                                                                                                          |

**MULTIL****MULTIL**

Function: Selects data for multi string reply

Description: Selects data values across phases and functions that can be read in a single string using the MULTIL? command.

Format: *MULTILOG,index,phase,function*

Arguments:

|           |                  |  |
|-----------|------------------|--|
| index:    |                  |  |
| 0         | clear all        |  |
| 1-64      | select data 1-64 |  |
| phase:    |                  |  |
| 1-3       | phase 1-3        |  |
| 4         | sum              |  |
| 5         | neutral          |  |
| 6         | ADI40            |  |
| function: |                  |  |
| 1-99      | see appendix C   |  |

Reply: none

Example:

|              |                 |
|--------------|-----------------|
| MULTIL,0     |                 |
| MULTIL,1,1,2 | (phase 1 Watts) |
| MULTIL,2,2,2 | (phase 2 watts) |
| MULTIL,3,4,3 | (sum VA)        |

MULTIL?  
3 data values returned

## Notes:

For further information and assistance with the Multilog application please go to page 2-115 where you will find an application guide to assist with this function.

**MULTIL?****MULTIL?**

|              |                                                                                                                                                                                                                                                                                                                                                                                                              |  |  |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|
| Function:    | Reads multi string reply                                                                                                                                                                                                                                                                                                                                                                                     |  |  |
| Description: | <p>Waits for data to be available (if required) then returns selected results.</p> <p>Either a single string or multiple string replies can be selected.</p>                                                                                                                                                                                                                                                 |  |  |
| Format:      | <p>MULTIL?</p> <p>MULTIL,<i>number</i>?</p>                                                                                                                                                                                                                                                                                                                                                                  |  |  |
| Arguments:   | number: The required number of data string replies                                                                                                                                                                                                                                                                                                                                                           |  |  |
| Reply:       | <p>A single reply string containing up to 64 data values as selected by the MULTIL command.</p> <p>Multiple reply strings each containing the same number of data values (maximum of 64) as selected by the MULTIL command.</p>                                                                                                                                                                              |  |  |
| Example:     | <p>MULTIL,0</p> <p>MULTIL,1,1,2                      (phase 1 Watts)</p> <p>MULTIL,2,2,2                      (phase 2 Watts)</p> <p>MULTIL,3,4,3                      (sum VA)</p> <p>MULTIL?</p> <p>In the above example a single string reply containing 3 data values is returned.</p> <p>MULTIL,10?</p> <p>In the above example 10 data strings are returned, each string containing 3 data values.</p> |  |  |

Notes:           The MULTILOG,*number*? command will  
reply each time a new data point is  
available.

For further information and assistance with the Multilog  
application please go to page 2-115 where you will find an  
application guide to assist with this function.

**NEWLOC**

**NEWLOC**

Function: Waits for new data then holds so that multiple commands can be used on the same data set.

Description: Reads multiple sets of data

Format: NEWLOC

Arguments: None

Reply: Data as per returned parameter query. ie from power, harmonics etc.

Example: NEWLOC;HARMON?SERIES;HPOWER?  
Harmonic series and Power data returned

Notes: After the command the data will still be held so to release the lock send SUSPEND,OFF

## **NOISEF**

## **NOISEF**

|              |                                                                                                                                                                                                                  |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Sets the noise filter.                                                                                                                                                                                           |
| Description: | Sets noise filter to value sent in string between 1KHz and 250KHz.                                                                                                                                               |
| Format:      | NOISEF,[PHASEx],value,frequency                                                                                                                                                                                  |
| Arguments:   | <p>[PHASEx]:</p> <p>Phase1</p> <p>Phase2</p> <p>Phase3</p> <p>Value:</p> <p>ON</p> <p>OFF</p> <p>frequency:</p> <p>Between: 1000 – 250000</p>                                                                    |
| Reply:       | none                                                                                                                                                                                                             |
| Example:     | NOISEF,PHASE1,ON,1500                                                                                                                                                                                            |
| Notes:       | Applies a digital filter for use in high noise environments. When in independent mode use [PHASEx] command to set noise filter on individual phases. [PHASESx] command is not required in any other wiring mode. |



**NOOVER****NOOVER**

|              |                                                                                                                                                                                                              |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Disable overranging                                                                                                                                                                                          |
| Description: | Prevents an overrange error from blanking out results in manual ranging.                                                                                                                                     |
| Format:      | NOOVER, <i>value</i>                                                                                                                                                                                         |
| Arguments:   | value:<br>ON<br>OFF                                                                                                                                                                                          |
| Reply:       | none                                                                                                                                                                                                         |
| Example:     | NOOVER,ON                                                                                                                                                                                                    |
| Notes:       | This can be useful when testing devices in a noisy environment. The range can be set to the correct range for the signal to be measured even if sporadic noise spikes would push it up on to the next range. |

## **NORMAL**

## **NORMAL**

|              |                                                                                                                                                                                                                                                                                                   |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Sets the Normalise reference to Current or Voltage.                                                                                                                                                                                                                                               |
| Description: | Sets the Reference for the NORMALISE function. Press ZERO on the instrument to action the function.                                                                                                                                                                                               |
| Format:      | NORMAL,reference                                                                                                                                                                                                                                                                                  |
| Arguments:   | Reference:<br>CURRENT<br>VOLTAGE                                                                                                                                                                                                                                                                  |
| Reply:       | none                                                                                                                                                                                                                                                                                              |
| Example:     | NORMAL,VOLTAGE<br>NORMAL,CURRENT<br>NORMALISE,VOLTAGE<br>NORMALISE,CURRENT                                                                                                                                                                                                                        |
| Notes:       | The "normalise" function adjusts the scale factors on each current channel so that they read the same as phase 1. The reference can be either the current measured on phase 1 or if there is a reference CT it can be connected to the external input of phase 1 voltage and used as a reference. |

## **PFCONV**

## **PFCONV**

Function: Set power factor sign convention.

Description: Fundamental power factor is given a sign depending convention either:  
                   negative if lagging current  
                   negative if leading current

Format: PFCONV,*type*

Arguments: type:  
                   NEGLAG  
                   NEGLEA

Reply: none

Example: PFCONV,NEGLAG

Notes: An inductive load would have a lagging current; a capacitive load would have a leading current.  
         The sign given to VAr can be independently set: see VARCON

## PHANGREF

## PHANGREF

Function: Set phase angle reference.

Description: Select phase angle reference to current or voltage.

Format: PHANGREF,*reference*

Arguments: reference:  
              Current  
              Voltage

Reply: none

Example: PHANGREF,current  
          PHANGREF,voltage

Notes:

## PHASEM

## PHASEM

Function: Set phase meter mode.

Description: Select phase meter mode and reference.

Format: PHASE,*reference*

Arguments: reference:  
            CH1   ratio = ch2/ch1  
            CH2   ratio = ch1/ch2

Reply: none

Example: PHASEM,CH2

Notes:

**PHASEM?****PHASEM?**

|              |                                                                                                                                                                                                               |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Phase meter query                                                                                                                                                                                             |
| Description: | Reads phase meter results.<br>Sets phase meter mode if not already set.<br>Waits for next unread data if available.<br>Clears new data available bit read by DAV?                                             |
| Format:      | PHASEM?<br>PHASEM, <i>phase</i> ?                                                                                                                                                                             |
| Arguments:   | phase:<br>PHASE1<br>PHASE2<br>PHASE3<br>PHASES?                                                                                                                                                               |
| Reply:       | 5 data values separated by commas<br>freq,mag1,mag2,dB,phase                                                                                                                                                  |
| Example:     | PHASEM,CH1<br>PHASEM,PHASE1?<br>data returned                                                                                                                                                                 |
| Notes:       | The phase convention can be set to 0° to -360°, 0° to +360°, or +180° to -180° in the SYSTEM menu or using PHCONV command.<br>PHASEM? without specifying the phase returns the appropriate single phase data. |

**PHCONV****PHCONV**

Function: Set phase convention and the harmonic angle.

Description: Set phase convention and optionally the harmonic angle.

Format: PHCONV,*convention,angle*

Arguments: convention:  
                   180: -180 to +180  
                   -360: 0 to -360  
                   +360: 0 to +360

Angle:  
           Cosine  
           Sine

Reply: none

Example: PHCONV, -360  
           PHCONV,180  
           PHCONV,180,cosine

Notes: 0 to -360 degrees is usually used for power analysis applications.

The Harmonic Angle argument is optional so does not have to be specified. However, to update the Harmonic phase angle argument the phase convention must be included in the command. See examples above. The default setting in the SYS menu is Cosine.

**POWER****POWER**

Function: Set up power analyser mode.

Description: Configure power analyser with sum  
current display type

Format: POWER,*sum type*

Arguments: sum type:  
TOTAL  
AVERAGE

Reply: none

Examples: POWER,TOTAL

Notes:



**POWER?****POWER?**

Function: Read power analyser results

Description: Reads back latest power analyser results.  
Sets power analyser mode.  
Waits for next unread data if necessary.  
Clears new data available status bit.

Format: *POWER,phase,results?*

Arguments: phase:  
               PHASE1  
               PHASE2  
               PHASE3  
               PHASES  
               SUM  
               NEUTRAL (current only)  
 results:  
               WATTS  
               VOLTAGE  
               CURRENT  
               VECTORS  
               RMS  
               WVA  
               PH-PH

Reply: WATTS:  
           freq,W,W.f,VA,VA.f,VAR,VAR.f,pf,pf.f,  
           Wdc,W.h  
 VOLTAGE or CURRENT:  
           freq,rms,mag,dc,phase,pk,cf,mean,  
           form factor,harm  
 VECTORS:  
           freq,vmag1,vlag1,amag1,alag1.....  
 RMS:  
           freq,vrms1,vdc1,arms1,adc1.....  
 WVA:  
           freq,w1,vrms1,arms1,w2.....

## PPA55xx communications manual

PH-PH:

freq,rms1,mag1,lag1,rms2...

Example:

POWER,VECTORS?

data returned

Notes:

POWER? without specifying the phase returns the appropriate single phase data. PHASES returns the data for all valid phases 1-3.

**PRIMAR****PRIMAR**

Function: Select only primary functions.

Description: Sets the instrument to only compute total functions not fundamentals, in order to allow shorter measurement windows.

Format: PRIMAR,*value*

Arguments: value:  
ON  
OFF

Reply: none

Example: PRIMAR,ON

Notes: When primary is on, fundamental values will be displayed as zero.

On the Instrument this command adjusts the HIGH SPEED mode option that can be found in the ACQU > Advanced menu options:

PRIMAR, ON = HIGH SPEED > ENABLED  
PRIMAR, OFF = HIGH SPEED > DISABLED

**PROGRA**

**PROGRA**

Function: Access non volatile program stores.

Description: Recall, store or delete non-volatile program store.

Format: *PROGRA,function,number*

Arguments: function:  
              RECALL  
              STORE  
              DELETE  
              number  
              0-100

Reply: none

Example: *PROGRA,RECALL,13*

Notes: Number 0 represents factory default, which can only be recalled.

## PROGRA?

## PROGRA?

**Function:** Identify current program or list all stored programs.

**Description:** Sending the argument FILES? – Lists all stored programs. The reply includes the location, file name and date saved for each program.  
Sending the argument NAME? - Displays the name of the last program to be loaded or recalled.

**Format:** PROGRA

**Arguments:** FILES?  
NAME?

**Reply:** text string

**Example:** PROGRA,FILES?  
2,PCIS,21/11/2017  
3,,21/11/2017  
10,remote program,11/01/18

PROGRA,NAME?  
factory default

PROGRAM,NAME?  
Remote program

**Notes:** If a program is stored but not given a name the return string will display no data for the name. See example above.

Only the first six digits of the command are required so PROGRA and PROGRAM are both valid, both return the same data.

## RANGE

## RANGE

|              |                                                                                                                                       |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set channel ranging.                                                                                                                  |
| Description: | Select minimum range and range control for a given input channel.                                                                     |
| Format:      | <i>RANGE,channel,ranging,range</i>                                                                                                    |
| Arguments:   | channel:<br>CH1<br>CH2<br>ranging:<br>AUTO<br>UPAUTO<br>MANUAL<br>range:<br>range number 1-9                                          |
| Reply:       | none                                                                                                                                  |
| Example:     | RANGE,CH2,MANUAL,4                                                                                                                    |
| Notes:       | CH1 sets the voltage range<br>CH2 sets the current range<br>Refer to the user manual for the range corresponding to each range number |

**RESOLU****RESOLU**

|              |                                                                                                                                                                                                                                                                                                                                                                                                             |                     |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| Function:    | Set the data resolution                                                                                                                                                                                                                                                                                                                                                                                     |                     |
| Description: | Data is returned in scientific format with exponent and mantissa. The resolution of the mantissa may be selected to be 5 digit (NORMAL) or 6 digit (HIGH) or 20 bit (BINARY).                                                                                                                                                                                                                               |                     |
| Format:      | RESOLU, <i>format</i>                                                                                                                                                                                                                                                                                                                                                                                       |                     |
| Arguments:   | format:                                                                                                                                                                                                                                                                                                                                                                                                     |                     |
|              | NORMAL                                                                                                                                                                                                                                                                                                                                                                                                      | (5 digit mantissa)  |
|              | HIGH                                                                                                                                                                                                                                                                                                                                                                                                        | (6 digit mantissa)  |
|              | BINARY                                                                                                                                                                                                                                                                                                                                                                                                      | (compressed format) |
| Reply:       | none                                                                                                                                                                                                                                                                                                                                                                                                        |                     |
| Example:     | RESOLU,HIGH                                                                                                                                                                                                                                                                                                                                                                                                 |                     |
| Notes:       | <p>Data format for NORMAL is:<br/> [-]1.2345E[-]00</p> <p>Data format for HIGH is:<br/> [-]1.23456E[-]00</p> <p>The sign of the mantissa and exponent are only sent if negative shown as [-] in the above examples</p> <p>BINARY format encodes each non-integer value in a proprietary 4 byte format for higher speed data transfer.</p> <p>[Further notes on data format are included in section 1.4]</p> |                     |

**RESULT****RESULT**

Function: Access non volatile results stores.

Description: Recall, store or delete non-volatile results.

Format: *RESULT,function,number*

Arguments: function:  
              RECALL  
              STORE  
              DELETE  
              number  
              1-20

Reply: none

Example: RESULT,RECALL,13

Notes: There are 3 types of result: normal, harmonic and scope. Harmonic and scope results occupy 3 locations each.



**RESULT?**

**RESULT?**

Function: Identify used result stores.

Description: Reads a directory of the 20 non-volatile result locations.

Format: RESULT?

Arguments: none

Reply: 20 integers separated by commas

Example: RESULT?  
0,0,1,3,-1,-1,0,2,-1,-1,0,0,0,0,0,0,0,0,0,0

Notes: 0 = empty  
1 = normal result  
2 = harmonic result  
3 = scope result  
-1 = continuation of previous

## **REZERO**

## **REZERO**

Function: Rezero front end

Description: Request the DSP to re-compensate for dc offset and compute a new autozero

Format: REZERO

Arguments: none

Reply: none

Example: REZERO

Notes:

**SCALE****SCALE**

|              |                                                                                            |
|--------------|--------------------------------------------------------------------------------------------|
| Function:    | Set channel scale factor.                                                                  |
| Description: | Set a multiplying scale factor for a given input channel.                                  |
| Format:      | <i>SCALE,channel,factor</i>                                                                |
| Arguments:   | channel:<br>CH1<br>CH2<br>factor:<br>multiplying scale factor                              |
| Reply:       | none                                                                                       |
| Example:     | SCALE,CH2,10                                                                               |
| Notes:       | CH1 sets the scale for all voltage channels<br>CH2 sets the scale for all current channels |

## SCOPE?

## SCOPE?

Function: Fetch raw scope data.

Description: Read back raw oscilloscope data.

Format: SCOPE,*channel*?  
SCOPE,*phase,channel*?

Arguments: phase:  
                PHASE1  
                PHASE2  
                PHASE3  
                NEUTRA  
            channel:  
                VOLTAGE  
                CURRENT

Reply: 252 signed integers:  
            range  
            trigger  
            250 x data

Example: HOLD,ON  
SCOPE,PHASE1,VOLTAGE?  
read data  
SCOPE,PHASE2,VOLTAGE?  
read data  
SCOPE,PHASE3,VOLTAGE?  
read data  
HOLD,OFF

Notes:

**SCREEN?**

**SCREEN?**

Function: Read the screen data

Description: Returns a bit map of screen pixel display in ascii and hex format

Format: SCREEN?

Arguments: none

Reply: Multiple data bit values

Example: SCREEN?  
data returned

Notes: SCREEN? response:

ASCII coded Hex  
(2 characters for each byte)  
240 lines of 40 bytes (each line represents one line of the display)  
preceded by #H  
Each byte represents 8 dots where the lsb is the leftmost dot of the display  
The bit is set for on and cleared for off

**SETUP****SETUP**

|              |                                                                                                                                                                                                                                                      |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Upload instrument set up                                                                                                                                                                                                                             |
| Description: | All the settings within the instrument may be read by SETUP?. The same settings may then be stored by ending the same data back to the instrument. As it sends all settings in a compressed format it is quicker than setting individual parameters. |
| Format:      | SETUP,index,data                                                                                                                                                                                                                                     |
| Arguments:   | index:<br>0-15<br>data:<br>ASCII hex as returned by SETUP?                                                                                                                                                                                           |
| Reply:       | none                                                                                                                                                                                                                                                 |
| Example:     | SETUP?<br>Read 16 lines of data<br>SETUP,00,data00<br>SETUP,01,data01<br>.<br>.<br>SETUP,15,data15                                                                                                                                                   |
| Notes:       | The settings are only updated when the 16 <sup>th</sup> line has been received and the checksum has been verified.                                                                                                                                   |

## SETUP?

## SETUP?

|              |                                                                                                                                                                                                                                                     |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Read instrument set up                                                                                                                                                                                                                              |
| Description: | All the settings within the instrument may be read by SETUP? The same settings may then be stored by ending the same data back to the instrument. As it sends all settings in a compressed format it is quicker than setting individual parameters. |
| Format:      | SETUP?                                                                                                                                                                                                                                              |
| Arguments:   | none                                                                                                                                                                                                                                                |
| Reply:       | 16 lines of ASCII data                                                                                                                                                                                                                              |
| Example:     | SETUP?<br>Read 16 lines of data                                                                                                                                                                                                                     |
| Notes:       |                                                                                                                                                                                                                                                     |

**SHUNT****SHUNT**

Function: Set channel shunt value

Description: Set the resistance factor of an external current shunt to be divided into the measured voltage for a given input channel.

Format: SHUNT,*channel,resistance*

Arguments: channel:  
              CH1  
              CH2  
              resistance:  
                  shunt resistance in Ohms

Reply: none

Example: SHUNT,CH1,10

Notes: The shunt value is set for all current channels



**SMOOTH****SMOOTH**

|              |                                                                                                                                                                       |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Select the smoothing                                                                                                                                                  |
| Description: | Sets the filter time constant and dynamic response.                                                                                                                   |
| Format:      | <i>SMOOTH,type,dynamics</i>                                                                                                                                           |
| Arguments:   | type:<br>NONE<br>NORMAL<br>SLOW<br>dynamics:<br>AUTO<br>FIXED                                                                                                         |
| Reply:       | none                                                                                                                                                                  |
| Example:     | SMOOTH,NORMAL,FIXED<br>SMOOTH,NONE                                                                                                                                    |
| Notes:       | It is not necessary to send both parameters if it is only required to set the type. Both arguments must be sent to set the dynamics.<br>FILTER is an alias for SMOOTH |

## **SPEED**

## **SPEED**

|              |                                                               |
|--------------|---------------------------------------------------------------|
| Function:    | Sets the measurement speed                                    |
| Description: | Sets the minimum window size for the measurement.             |
| Format:      | <i>SPEED,value,window</i>                                     |
| Arguments:   | value:<br>VFAST<br>FAST<br>MEDIUM<br>SLOW<br>VSLOW<br>WINDOW  |
| Reply:       | none                                                          |
| Example:     | SPEED,SLOW<br>SPEED,WINDOW,0.1                                |
| Notes:       | The window size argument is only needed for the WINDOW option |

**START**

**START**

Function: Start datalog  
Description: Initiate datalog data acquisition.  
Format: START  
Arguments: none  
Reply: none  
Example: DATALOG, RAM, 0.02  
START  
Notes:

## STATUS?

## STATUS?

|              |                                                                                                                                       |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Read back channel ranging status.                                                                                                     |
| Description: | Read back condition of selected channel:<br>range number (1-16)<br>range text<br>overflow/underflow status                            |
| Format:      | STATUS?                                                                                                                               |
| or:          | STATUS, <i>channel</i> ?<br>STATUS? <i>channel</i>                                                                                    |
| Arguments:   | channel:<br>CH1<br>.<br>.<br>CH6                                                                                                      |
| Reply:       | range number,range text,over/under/ok<br>1-16<br>range as per RANGE command<br>OVER if overflow<br>LOW if underflow<br>OK if in range |
| Example:     | STATUS,CH1?<br>6,300V,OK<br>STATUS?<br>OK                                                                                             |
| Notes:       |                                                                                                                                       |

## **STOP**

## **STOP**

Function: Stop datalog  
Description: Stop datalog data acquisition.  
Format: STOP  
Arguments: none  
Reply: none  
Example: DATALOG, RAM, 0.02  
START  
*wait for data values*  
STOP  
*read data values*

Notes:

## **SUSPEN**

## **SUSPEN**

Function: Suspend data acquisition.

Description: Disable the data acquisition to maximise the communication speed.

Format: *SUSPEN,value*

Arguments: value:  
            ON  
            OFF

Reply: none

Example: FAST,ON  
          SUSPEN,ON  
          MULTILOG?  
          SUSPEN,OFF  
          FAST,OFF

Notes:

## **TAGREP**

## **TAGREP**

|              |                                                                                                                                  |
|--------------|----------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set up a reply tag                                                                                                               |
| Description: | Select a reply tag to identify the instrument in a multi-instrument environment                                                  |
| Format:      | TAGREP, <i>on/off</i>                                                                                                            |
| Arguments:   | on/off:<br>ON<br>OFF                                                                                                             |
| Reply:       | none                                                                                                                             |
| Example:     | TAGREP,ON<br>*ESR?<br>PPA5530:00635:1                                                                                            |
| Notes:       | When “tag reply” is turned on every reply string has a prefix of an identification string comprising the model and serial number |

## TEMPER

## TEMPER

Function: Set up temperature measurement

Description: Set scaling and offset for a temperature sensor connected to the torque input (power transformer application mode)

Format: *TEMPER,type,scalefactor,offset*

Arguments: type:  
                   DISABLED  
                   CENTIG  
                   FARHEN  
           scale:  
                   multiplying factor in degrees/Volt  
           offset:  
                   additive zero in Volts

Reply: none

Example: TEMPER,CENTIG,5,-2  
           sensor scaling = 5°C/V  
           0V = 10°C

Notes:



**TEMPER?**

**TEMPER?**

Function: Read the temperature

Description: Returns the measured temperature from a sensor connected to the torque input

Format: TEMPER?

Arguments: none

Reply: single data value

Example: TEMPER?  
data returned

Notes:

**TORQSP****TORQSP**

|              |                                                                                                                                                                              |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set up torque and speed measurement                                                                                                                                          |
| Description: | Set scaling and offset for torque and speed measurements. Pulsed input has a value for the number of pulses per revolution.                                                  |
| Format:      | TORQSP, <i>type,scale1,scale2</i><br>TORQSP,OFFSET, <i>offset1,offset2</i>                                                                                                   |
| Arguments:   | type:<br>DISABLED<br>ANALOG<br>PULSED (SPEED)<br>OFFSET<br>scale1 and scale 2<br>multiplying factor in Nm/V or rpm/V<br>pulses/rev<br>offset1 and offset2<br>zero level in V |
| Reply:       | none                                                                                                                                                                         |
| Examples:    | TORQSP,PULSED,10,50<br>speed measured by pulse<br>torque scaling = 10Nm/V<br>50 pulses/revolution<br><br>TORQSP,ANALOG,10,1                                                  |
| Notes:       | If type = ANALOG then speed scaling is in rpm/V, if type = PULSED then speed scaling is pulses/rev<br>Torque scaling is always Nm/V                                          |

**TORQSP?**

**TORQSP?**

|              |                                                                                         |
|--------------|-----------------------------------------------------------------------------------------|
| Function:    | Read the mechanical power, torque and speed                                             |
| Description: | Returns measured mechanical power value along with the torque and speed values          |
| Format:      | TORQSP?                                                                                 |
| Arguments:   | none                                                                                    |
| Reply:       | 3 data values separated by commas:<br>power, torque, speed                              |
| Example:     | TORQSP?<br>data returned                                                                |
| Notes:       | Mechanical power displayed in Watts<br>Torque displayed in Nm<br>Speed displayed in rpm |

**USER?**

**USER?**

Function: Read the user data

Description: Returns up to 3 lines of user data

Format: USER?

Arguments: none

Reply: 3 lines of ASCII terminated by CR

Example: USER?  
          Newtons4th Ltd  
          R&D department  
          PPA5530 #4

Notes:

## **VARCON**

## **VARCON**

|              |                                                                                                                                                                        |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Set VAr sign convention.                                                                                                                                               |
| Description: | Fundamental VAr measurement is given a sign depending convention either:<br>negative if lagging current<br>negative if leading current                                 |
| Format:      | VARCON, <i>type</i>                                                                                                                                                    |
| Arguments:   | type:<br>NEGLAG<br>NEGLEA                                                                                                                                              |
| Reply:       | none                                                                                                                                                                   |
| Example:     | VARCON,NEGLAG                                                                                                                                                          |
| Notes:       | An inductive load would have a lagging current, a capacitive load would have a leading current.<br>The sign given to power factor can be independently set: see PFCONV |

**VERSIO?**

**VERSIO?**

|              |                                                                                                                                    |
|--------------|------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Read the instrument code versions.                                                                                                 |
| Description: | Returns an ASCII string with the details of the various parts of the instrument firmware.                                          |
| Format:      | VERSIO?                                                                                                                            |
| Arguments:   | none                                                                                                                               |
| Reply:       | date code, type, cpu, dsp, fpga, boot type:<br>0 – normal (30A)<br>2 – low current version (10A)<br>4 – high current version (50A) |
| Examples:    | VERSION?<br>KQ1306,0,1.10,1.10,1.10,1.01                                                                                           |
| Notes:       | This data can be displayed on the screen by pressing SYSTEM then BACK                                                              |

## **VRMS**

## **VRMS**

|              |                                       |
|--------------|---------------------------------------|
| Function:    | Set up rms voltmeter.                 |
| Description: | Set mode to rms voltmeter.            |
| Format:      | VRMS                                  |
| Arguments:   | none                                  |
| Reply:       | none                                  |
| Examples:    | VRMS                                  |
| Notes:       | This has the same effect as MODE,VRMS |

**VRMS?****VRMS?**

|              |                                                                                                                                                                                                                                                      |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Read true rms voltmeter results                                                                                                                                                                                                                      |
| Description: | Reads back latest voltmeter results.<br>Waits for next unread data if necessary.<br>Clears new data available status bit.                                                                                                                            |
| Format:      | <i>VRMS,phase,results?</i>                                                                                                                                                                                                                           |
| Arguments:   | results:<br>RMS<br>MEAN<br>SURGE<br>phase:<br>PHASE1<br>PHASE2<br>PHASE3<br>PHASES                                                                                                                                                                   |
| Reply:       | RMS:<br>6 data values separated by commas<br>Vrms,Arms,Vdc,Adc,Vac,Aac<br>MEAN:<br>6 data values separated by commas<br>Vrms,Arms,Vmean,Amean,Vff,Aff<br>SURGE:<br>8 data values separated by commas<br>Vrms,Arms,Vpk,Apk,Vcf,Acf,<br>Vsurge1,Asurge |
| Example:     | VRMS,PHASE1,RMS?                                                                                                                                                                                                                                     |
| Notes:       | VRMS? without specifying the phase returns the appropriate single phase data.                                                                                                                                                                        |



**WIRING****WIRING**

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Select wiring mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Description: | Set wiring mode for computation of SUM and neutral data.                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Format:      | WIRING, <i>type</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Arguments:   | type: <ul style="list-style-type: none"> <li>SINGLE (single ph 1)</li> <li>2PHASE (2 ph 2 wattmeter)</li> <li>3PH2WA (3 ph 2 wattmeter)</li> <li>3PH3WA (3 ph 3 wattmeter)</li> <li>INDPH3 (3 ph 2 wattmeter + ph3)</li> <li>PHASE1 (single ph 1)</li> <li>PHASE2 (single ph 2)</li> <li>PHASE3 (single ph 3)</li> <li>INDEP (independent)</li> <li>3PH3WA,DELTAS (Delta – Star)</li> <li>3PH3WA,PPRMS (PH-PH RMS)</li> <li>3PH3WA,PPMEAN (Rectified mean)</li> <li>3PH3WA,STARDE (Star – Delta)</li> </ul> |
| Reply:       | none                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Examples:    | WIRING,PHASE2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Notes:       | WIRING,SINGLE is the same as WIRING,PHASE1                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

**XSCALE****XSCALE**

|              |                                                                                                                                                              |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Enables extended system calibration mode                                                                                                                     |
| Description: | Enable External system scaling in the AUX menu. Select the required range (1 to 4) for each channel.                                                         |
| Format:      | Xscale,function,<br>Xscale,channel,range                                                                                                                     |
| Arguments:   | Function<br>Enable<br>Disable<br><br>Channel:<br>CH1<br>CH2<br>CH3<br>CH4<br>CH5<br>CH6<br><br>Range:<br>1 (1 ohm)<br>2 (2.5 ohm)<br>3 (5 ohm)<br>4 (10 ohm) |
| Reply:       | none                                                                                                                                                         |
| Examples:    | Xscale,enable<br><br>This example enables the mode.<br><br>Xscale,CH4,2<br><br>This example loads the 2.5ohm range (range 2) for phase 2 current.            |

Notes: To use this command it is necessary to first enable the mode and then resend the command to individually set up each channel.

This command provides a multiple scaling option for the system calibration of the PPA35xx with a LEM6.

Sending this command automatically enables independent ranging.

## **ZERO**

## **ZERO**

|              |                                                                                                                                                                          |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Apply or remove the zero                                                                                                                                                 |
| Description: | Applies or removes a zero function depending on the measurement mode (same as pressing ZERO key).<br>Resets the integration data and timer if in power integration mode. |
| Format:      | ZERO<br>ZERO,DELETE                                                                                                                                                      |
| Arguments:   | none                                                                                                                                                                     |
| Reply:       | none                                                                                                                                                                     |
| Example:     | ZERO                                                                                                                                                                     |
| Notes:       |                                                                                                                                                                          |

**ZOOM****ZOOM**

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Function:    | Sets the display zoom parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Description: | Sets the zoom level and data.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Format:      | <i>ZOOM,level,data1,data2,data3,data4</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Arguments:   | <p>level:</p> <ul style="list-style-type: none"> <li>0 – normal</li> <li>1 – 2 line display (zoom level 1)</li> <li>2 – single line display (zoom level 2)</li> <li>3 – single line display (zoom level 3)</li> </ul> <p>data1:</p> <ul style="list-style-type: none"> <li>first data (zoom level 1)</li> <li>or data for single line (zoom level 2)</li> </ul> <p>data2-4:</p> <ul style="list-style-type: none"> <li>other data (zoom level 1)</li> </ul> <p>data consists of line number for channel 1<br/>or line number + 64 for channel 2</p> |
| Reply:       | None                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Example:     | <p>VRMS</p> <p><i>ZOOM,1,1,65</i> (level 1, ch1 rms, ch2 rms)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Notes:       | It is not necessary to send all the parameters, but whatever parameters are sent must be in the correct order.                                                                                                                                                                                                                                                                                                                                                                                                                                      |

## **ZOOM?**

## **ZOOM?**

Function: Read the display zoom parameters.

Description: Reads the zoom level and data.

Format: ZOOM?

Arguments:

Reply: 5 integers separated by commas:  
level:

0 – normal

1 – 2-4 value display (zoom level 1)

2 – single line display (zoom level 2)

3 – single line display (zoom level 3)

data1-4:

zoom data

data consists of line number for channel 1  
or line number + 64 for channel 2

Example: ZOOM?  
1,1,65,0,0 (level 1, ch1 rms, ch2 rms)

Notes:

## **Multilog Application Guide**

### **Configuring the N4L PPA Power Analyzer for Data logging**

The Multilog (MULTIL) command provides an excellent method for data logging up to 64 parameters of information via one query command - MULTIL?

The instrument will return a comma-separated string which relates to the MULTIL,X,X,X setup commands previously entered by the relevant communication method. This enables the system to send one query and return up to 64 different parameters, from different phases in one response.

#### **Step 1.**

Reset "MULTILOG" using the **MULTIL,0** command

This will clear any previously entered Multilog parameters and ensure the instrument does not return unwanted results.

#### **Step 2.**

Set up the Multilog parameters

The format of the Multilog command is as follows

MULTILOG, Index, Phase, function

Index is the order in which the value is returned (Effectively allocating a "slot" for the parameter in the returned string)

Phase is the phase (PH1,PH2,PH3 etc) from which the result should be acquired.

Function is the parameter type (eg. Watts, VAr, Frequency etc) of the return.

## PPA55xx communications manual

The Function ID is chosen from Appendix C which is a continually growing list due to firmware upgrades of the power analyzers at N4L, at present the PPA5500 has 93 possible functions:

| Function | Measurement       | Notes |
|----------|-------------------|-------|
| 1        | frequency         |       |
| 2        | watts             |       |
| 3        | VA                |       |
| 4        | VAr               |       |
| 5        | power factor      |       |
| 6        | fundamental watts |       |
| 7        | fundamental VA    |       |
| 8        | fundamental VAr   |       |
| 9        | fundamental PF    |       |
| 10       | harmonic watts    |       |
| 11       | harmonic watts %  |       |
| 12       | impedance         |       |
| 13       | resistance        |       |

Example extract from the Multilog function list



**Required Parameters**

| Order parameter to be returned within string | Phase (channel) of data returned | Parameter required  |
|----------------------------------------------|----------------------------------|---------------------|
| 1                                            | 1                                | Frequency           |
| 2                                            | 1                                | Watts Phase 1       |
| 3                                            | 2                                | Watts Phase 2       |
| 4                                            | 3                                | Watts Phase 3       |
| 5                                            | 1                                | RMS Voltage Phase 1 |
| 6                                            | 2                                | RMS Voltage Phase 1 |
| 7                                            | 3                                | RMS Voltage Phase 1 |

**MULTILOG Pattern**

| Command | Index | Phase | Function |
|---------|-------|-------|----------|
| MULTIL, | 1     | 1     | 1        |
| MULTIL, | 2     | 1     | 2        |
| MULTIL, | 3     | 2     | 2        |
| MULTIL, | 4     | 3     | 2        |
| MULTIL, | 5     | 1     | 50       |
| MULTIL, | 6     | 2     | 50       |
| MULTIL, | 7     | 3     | 50       |

Command strings to sent, reference the above Multilog pattern;

MULTIL,0        // clears Multilog

MULTIL,1,1,1   // set Frequency as parameter 1

MULTIL,2,1,2   // set Phase 1 Watts as parameter 2

MULTIL,3,2,2   // set Phase 2 Watts as parameter 3

MULTIL,4,3,2   // set Phase 3 Watts as parameter 4

MULTIL,5,1,50 // set Phase 1 RMS Voltage as parameter 5

MULTIL,6,2,50 // set Phase 2 RMS Voltage as parameter 6

MULTIL,7,3,50 // set Phase 3 RMS Voltage as parameter 7

**Step 3.**

Send Multil query and read return string.

MULTIL? // returns a comma separated string as

Example return string:

5.0000E1, 2.4500E2, 2.4320E2, 2.5421E2, 1.0232E3, 1.0152E3, 1.0546E3

|           |           |           |           |              |              |              |
|-----------|-----------|-----------|-----------|--------------|--------------|--------------|
| ↑         | ↑         | ↑         | ↑         | ↑            | ↑            | ↑            |
| Frequency | PH1 Watts | PH2 Watts | PH3 Watts | PH1 RMS Volt | PH2 RMS Volt | PH3 RMS Volt |

Appendix – command summary

COMMAND SUMMARY

## PPA55xx communications manual

| command format             | reply format                           |
|----------------------------|----------------------------------------|
| *CLS                       |                                        |
| *ESE,value                 |                                        |
| *ESE?                      | single integer data value              |
| *ESR?                      | single integer data value              |
| *IDN?                      | company,product,serial no,version      |
| *OPC?                      | 0 or 1                                 |
| *RST                       |                                        |
| *SRE,value                 | single integer data value              |
| *SRE?                      |                                        |
| *STB?                      | single integer data value              |
| *TRG                       |                                        |
| *TST?                      | single integer data value              |
| *WAI                       |                                        |
| ABORT                      |                                        |
| ADIMAP                     |                                        |
| ALARM,latch,sounder        |                                        |
| ALARM?                     | single integer data value              |
| ALARME,value               |                                        |
| ALARME?                    | single integer data value              |
| ALARM1,type,data,high,low  |                                        |
| ALARM2,type,data,high,low  |                                        |
| ANALOG                     |                                        |
| ANALOG?                    |                                        |
| APPLIC,type,setting        |                                        |
| BANDWI,phase,type          |                                        |
| BEEP                       |                                        |
| BLANKI,on/off,threshold    |                                        |
| CALSTR?                    | String                                 |
| CALVER?                    | String                                 |
| CAPTUR?                    | String                                 |
| CONFIG,parameter,data      |                                        |
| CONFIG,parameter?          | single integer or real data value      |
| COUPLI,phase,coupling      |                                        |
| DATALO,func,interval,speed |                                        |
| DATALO,LINES?              | single integer                         |
| DATALO,0?                  | index,time,data... one record per line |
| DATALO,start,records?      | index,time,data... one record per line |
| DAV?                       | single integer data value              |
| DAVER,value                |                                        |
| DAVER?                     | single integer data value              |
| DISPLAY,page               |                                        |

## PPA55xx communications manual

|                           |                                                                                    |
|---------------------------|------------------------------------------------------------------------------------|
| DISPLAY?                  | multiple real data values                                                          |
| EFFICI,type               |                                                                                    |
| EFFICI?                   | total efficiency, fundamental efficiency                                           |
| FAST,on/off               |                                                                                    |
| FQLOCK,on/off             |                                                                                    |
| FQREF,phase,channel       |                                                                                    |
| FREQFI,on/off,filter      |                                                                                    |
| FREQUE,frequency          |                                                                                    |
| FSD?                      | Single or multiple real data values                                                |
| HARMON,para,h,hmax        |                                                                                    |
| HARMON,phase?             | freq,mag1,mag2,hmag1,hmag2,h1,h2,<br>thd1,thd2,hphase1,hphase2                     |
| Or                        |                                                                                    |
| HARMON,phase,SERIES?      | mag,%, x n harmonics                                                               |
| Or                        | mag,phase, x n harmonics                                                           |
| HOLD,on/off               |                                                                                    |
| INPUT,channel,type        |                                                                                    |
| INTEGR,type,display       |                                                                                    |
| INTEGR,RUNTIM,hours,mins  |                                                                                    |
| INTEGR,phase?             | Time,Wh,Wh.f, Varh,Varh.f,Vah,Vah.f,<br>pf,pf.f,Vav,Vav.fAh,Ah.f                   |
| KEYBOA,value              |                                                                                    |
| LCR,conditions,param,head |                                                                                    |
| LCR,phase?                | Freq,mag1,mag2,impedance,phase,R,<br>L,C (series),R,L,C (parallel),tan $\delta$ ,Q |
| LOWFRE,on/off             |                                                                                    |
| MODE,type                 |                                                                                    |
| MSLAVE,type               |                                                                                    |
| MULTILOG,index,phase,func |                                                                                    |
| MULTILOG?                 | 1-30 floats as selected                                                            |
| PFCNV,convention          |                                                                                    |
| PHASEM,ratio              |                                                                                    |
| PHASEM,phase?             | Freq,mag1,mag2,dB,phase                                                            |
| PHCONV,convention         |                                                                                    |
| PRIMAR                    |                                                                                    |
| POWER,sum A               |                                                                                    |
| POWER,PHASE,WATTS?        | Freq,W,W.f, VA,VA.f,Var,Var.f,pf,pf.f,<br>Wdc,W.h                                  |
| POWER,PHASE,VOLTAGE?      | Freq,rms,mag,dc, $\phi$ ,peak,cf,mean,ff,<br>harmonic                              |
| POWER,PHASE,CURRENT?      | Freq,rms,mag,dc, $\phi$ ,peak,cf,mean,ff,<br>harmonic                              |
| POWER,PH-PH?              | Freq,rms1,mag1, $\phi$ 1,rms2,mag2, $\phi$ 2,<br>rms3,mag3, $\phi$ 3               |

## PPA55xx communications manual

|                           |                                                                                                |
|---------------------------|------------------------------------------------------------------------------------------------|
| POWER,RMS?                | Freq,vrms1,vdc1,arms1,adc1,vrms2,vdc2,arms2,adc2,vrms3,vdc3, arms3, adc3                       |
| POWER,VECTORS?            | Freq,mag1, $\phi$ 1,mag2, $\phi$ 2,mag3, $\phi$ 3,mag4, $\phi$ 4,mag5, $\phi$ 5,mag6, $\phi$ 6 |
| POWER,WVA?                | Freq,w1,vrms1,arms1,w2,vrms2,arms2,w3,vrms3,arms3                                              |
| PROGRAM,function,number   |                                                                                                |
| PROGRAM?                  | CR terminated text string                                                                      |
| RANGE,ch,ranging,range    |                                                                                                |
| RESOLU.format             |                                                                                                |
| RESULT,function,number    |                                                                                                |
| RESULT                    | multiple integers                                                                              |
| REZERO                    |                                                                                                |
| SCALE,channel,factor      |                                                                                                |
| SCALE,channel?            | Single real data value                                                                         |
| SCOPE,PHASE,v/a?          | Range, trigger, 250 signed integer values                                                      |
| SHUNT,channel,resistance  |                                                                                                |
| SHUNT,channel?            | Single real data value                                                                         |
| SMOOTH,type,dynamics      |                                                                                                |
| SPEED,value>window        |                                                                                                |
| START                     |                                                                                                |
| STATUS,channel?           | Range number,range text,over/low/ok                                                            |
| STOP                      |                                                                                                |
| STREAM,enable>window      |                                                                                                |
| STREAM,disable            |                                                                                                |
| STREAM?                   | Data, data, data, data, data, .....                                                            |
| SUSPEN,on/off             |                                                                                                |
| TAGREP,on/off             |                                                                                                |
| TEMPER,type,scale,offset  |                                                                                                |
| TEMPER?                   | single real data value                                                                         |
| TORQSP,type,tscale,sscale |                                                                                                |
| TORQSP,OFFSET,toff,soff   |                                                                                                |
| TORQSP?                   | mechanical power, torque, speed                                                                |
| USER?                     | 3 CR terminated text strings                                                                   |
| VARCON,convention         |                                                                                                |
| VERSION?                  | datecode,cpu,dsp,fpga,boot                                                                     |
| VRMS                      |                                                                                                |
| VRMS,PHASE,RMS?           | rms1,rms2,dc1,dc2,ac1,ac2                                                                      |
| VRMS,PHASE,MEAN?          | rms1,rms2,mean1,mean2,ff1,ff2                                                                  |
| VRMS,PHASE,SURGE?         | pk1,pk2,cf1,cf2,surge1,surge2                                                                  |
| WIRING,configuration      |                                                                                                |

## PPA55xx communications manual

XSCALE

ZERO

ZERO,DELETE

ZOOM,level,d1,d2,d3,d4

ZOOM? level,d1,d2,d3,d4

## Appendix B – Configurable parameters

All parameters can be accessed using the CONFIG command:

| CONFIG, <i>number,parameter</i> |                                                      |                                                                                                                                             |
|---------------------------------|------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <i>number</i>                   | Function                                             | <i>parameter</i>                                                                                                                            |
| 1                               | Operating mode, (sets Main Mode)                     | 0=RMS Voltmeter<br>1=Phase Meter<br>2=Power Analyser<br>3=Impedance Analyser<br>4=Power Integrator<br>5=Harmonic Analyser<br>7=Oscilloscope |
| 2                               | Resolution, (remote options – digit resolution)      | 0=Normal<br>1=High<br>2=Binary                                                                                                              |
| 3                               | Master/slave, (Aux control)                          | 0=Disabled<br>1=Master<br>2=Slave                                                                                                           |
| 4                               | Autozero manual or auto, (System options)            | 0=Auto<br>1=Manua                                                                                                                           |
| 6                               | Phase convention, (System options)                   | 0=-180° to +180°<br>1=0° to -360°<br>2=0° to +360°                                                                                          |
| 7                               | Frequency lock on/off, (Acquisition advance options) | 0=Off<br>1=On<br>2=Dynamic                                                                                                                  |



## PPA55xx communications manual

- 8           **Graph,** (System options)  
                    0=Dots  
                    1=Lines
- 9           **Keyboard beep on/off,** (System options)  
                    0=Off  
                    1=On
- 10          **Ignore overload,**(Acquisition advance options)  
                    0=Off  
                    1=On
- 11          **Low frequency mode,** (Acquisition control)  
                    0=Off  
                    1=On
- 12          **Window size,** (Acquisition control, speed-window)  
                    0=mS  
                    1=Sec's
- 13          **Speed,** (Acquisition control or Phase meter)  
                    0=Very Slow  
                    1=Slow  
                    2=Medium  
                    3=Fast  
                    4=Very Fast  
                    5=Window
- 14          **Smoothing** (Acquisition Control or Phase Meter)  
                    0=Normal  
                    1=Slow  
                    2=None
- 15          **Smoothing Response** (Acquisition Control or Phase meter)  
                    0=Auto reset  
                    1=Fixed time
- 16          **Baud rate,** (Remote options , RS232)  
                    0=38400  
                    1=19200  
                    2=9600  
                    3=1200

## PPA55xx communications manual

- 18 LAN IP address nibble 3, (Remote options - LAN - enter figure as required)
- 19 LAN IP address nibble 2, (Remote options - LAN - enter figure as required)
- 20 LAN IP address nibble 1, (Remote options - LAN - enter figure as required)
- 21 LAN IP address nibble 0, (Remote options - LAN - enter figure as required)
- 22 Independent ranging, (System options)  
0=Disabled  
1=Enabled
- 24 Enable channel 1, (Range - voltage input)  
1=Internal  
3=External Attenuator
- 25 Enable channel 2, (Range - current input)  
1=Internal  
2=External Shunt
- 26 Input range channel 1, (Range - minimum range voltage)  
0=300mV  
1=1V  
2=3V  
3=10V  
4=30V  
5=100V  
6=300V  
7=1kV  
8=3KV
- 27 Input range channel 2, (Range - minimum range current)  
0=30mA  
1=100mA  
2=300mA  
3=1A  
4=3A  
5=10A  
6=30A  
7=100  
8=300A
- 28 Input ranging channel 1, (Range - autoranging voltage)  
0=Full Autorange  
1=Range up only  
2=Manual

## PPA55xx communications manual

- |    |                                                                                                                                                                             |
|----|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 29 | Input ranging channel 2, (Range – autoranging current)<br>0= Full Autorange<br>1=Range up only<br>2=Manual                                                                  |
| 30 | Coupling, (Coupling)<br>0=ac+dc<br>1=ac<br>2=dc                                                                                                                             |
| 31 | Bandwidth, (Coupling - bandwidth)<br>0=Wide (dc-2MHz)<br>1=Low (dc-200KHz)<br>2=dc (dc-5Hz)                                                                                 |
| 32 | Scale factor channel 1 voltage, (Ranging - Enter figures as required)                                                                                                       |
| 33 | Scale factor channel 2 current, (Ranging - Enter figures as required)                                                                                                       |
| 34 | External attenuator channel 1, (Ranging – voltage input - attenuator ratio<br>– Enter figures as required)                                                                  |
| 35 | External shunt channel 2, (Ranging – current input - resistance value- Enter<br>figures as required)                                                                        |
| 38 | Frequency reference voltage/current, (Acquisition control)<br>0=Voltage<br>1=Current<br>2=Speed<br>3=ac line                                                                |
| 40 | Frequency reference phase, (Acquisition control)<br>0=Phase 1<br>1=Phase 2<br>2=Phase 3                                                                                     |
| 41 | Display page, (Main display)<br>0=Phase 1 page<br>1=Phase 2 page<br>2=Phase 3 page<br>3=Sum page<br>4=Phase 1,2 & 3 page<br>5=Phase 1,2 & 3 fundamentals page<br>6=NEU page |

- 42        Zoom level, (Main display)  
          0=Zoom –  
          1=Zoom +  
          2=Second Zoom +  
          3=Third Zoom +
- 43        Function zoomed on 1, (Main display)  
          0=Voltage, Current & Frequency  
          1=Watts, Current, Voltage & Frequency  
          2= VA, Current, Voltage & Frequency  
          3= VAr, Current, Voltage & Frequency  
          4= pf, Current, Voltage & Frequency
- 44        Function zoomed on 2, (Main display)  
          0=Current & Frequency  
          1= Watts, Current & Frequency  
          2= VA, Current & Frequency  
          3= VAr, Current & Frequency  
          4= pf, Current & Frequency  
          5= Current, Voltage & Frequency
- 45        Function zoomed on 3, (Main display)  
          0= Watts & Frequency  
          2= Watts, VA & Frequency  
          3= Watts, VAr & Frequency  
          4= Watts, pf & Frequency  
          5= Watts, Voltage & Frequency  
          6= Watts, Current & Frequency
- 46        Function zoomed on 4, (Main display)  
          0= Watts & VA  
          3= Watts, VA & VAr  
          4= Watts, VA & pf  
          5= Watts, VA & Voltage  
          6= Watts, VA & Current  
          7= Watts, VA & Frequency  
          8= Watts, VA & Harmonic  
          9= Watts, VA & dc watts  
          10= Watts, VA & V Ph-Ph

## PPA55xx communications manual

- 47      Datalog display type, (Datalog display information mode)  
         0=Real Time  
         1=Table  
         2=Graph
- 48      Manual frequency, (Acquisition advance options – frequency lock on)  
         0=Frequency in  $\mu\text{Hz}$   
         1=Frequency in Hz
- 49      DFT selectivity, (Acquisition advance options)  
         0=Normal  
         1=Narrow
- 50      Program 1-6 direct load, (System options)  
         0=Disabled  
         1=Enabled
- 51      Language, (System options)  
         0=English  
         1=Other language if installed
- 52      Frequency filter, (Acquisition control)  
         0=Disabled  
         1=Enabled
- 53      Phase reference, (Acquisition control)  
         0=Voltage  
         1=Current
- 54      Datalog Zoom1, (Datalog-RAM)  
         0=Enabled  
         1=Disabled
- 55      Datalog Zoom2, (Datalog-RAM)  
         0=Enabled  
         1=Disabled
- 56      Datalog Zoom3, (Datalog-RAM)  
         0=Enabled  
         1=Disabled

## PPA55xx communications manual

- 57      Datalog Zoom4, (Datalog-RAM)  
         0=Enabled  
         1=Disabled
- 58      Datalog memory type, (Datalog)  
         0=Disabled  
         1=RAM  
         2=Internal Flash  
         3=USB Memory stick
- 59      Datalog Interval, (Datalog) (Enter interval time figure in seconds)
- 60      Datalog graph, (Datalog-RAM)  
         0=Together  
         1=Separate
- 61      Formula, (Maths)  
         0=Disabled  
         1=(term1 + term2/term3 + term4)  
         2=(term1 + term2) x term3/term4  
         3=term1 x term2/(term3 + term4)
- 62      Argument term 1  
         0=Disabled  
         1=Constant  
         2=Voltage  
         3=Current  
         4=Torque  
         5=Speed
- 63      Sub argument term 1, (For voltage and current arguments only)  
         0=rms  
         1=dc  
         2=ac  
         3=Fundamental  
         4=Peak  
         5=Mean  
         6= Ph-Ph rms  
         7=Ph-Ph mag

## PPA55xx communications manual

- 64      Term 1 coefficient, (Enter value)
- 65      Argument term 2,  
         0=Disabled  
         1=Constant  
         2=Voltage  
         3=Current  
         4=Torque  
         5=Speed
- 66      Sub argument term 2, (For voltage and current arguments only)  
         0=rms  
         1=dc  
         2=ac  
         3=Fundamental  
         4=Peak  
         5=Mean  
         6= Ph-Ph rms  
         7=Ph-Ph mag
- 67      Term 2 coefficient, (Enter value)
- 69      Frequency lock, minimum freq, (ACQU, advanced options)  
         Enter value (0.010 to 500)
- 70      Application mode,  
         0=Normal  
         1=PWM motor Drive  
         2=Lighting ballast  
         3=Inrush current  
         4=Transformer mode  
         5=Standby power  
         6=Calibration mode  
         7=Harmonics / Flicker  
         8=TVF105 mode  
         9=Capture mode (PPA5512/5532 only)

## PPA55xx communications manual

- 71      Frequency filter, (Application options mode - PWM Motor Drive)  
         0=4KHz  
         1=1KHz  
         2=250Hz
- 72      Frequency tracking speed, (Application options mode - Lighting Ballast)  
         0=Fixed time  
         1=Fast  
         2=Medium  
         3=Slow
- 73      Low frequency, (Application options mode - PWM Motor Drive)  
         0=Off  
         1=On
- 74      Argument term 3  
         0=Disabled  
         1=Constant  
         2=Voltage  
         3=Current  
         4=Torque  
         5=Speed
- 75      Sub argument term 3, (For voltage and current arguments only)  
         0=rms  
         1=dc  
         2=ac  
         3=Fundamental  
         4=Peak  
         5=Mean  
         6= Ph-Ph rms  
         7=Ph-Ph mag
- 76      Term 3 coefficient, (Enter value)
- 77      Argument term 4  
         0=Disabled  
         1=Constant  
         2=Voltage  
         3=Current  
         4=Torque  
         5=Speed



## PPA55xx communications manual

- 78 Sub argument term 4, (For voltage and current arguments only)  
0=rms  
1=dc  
2=ac  
3=Fundamental  
4=Peak  
5=Mean  
6= Ph-Ph rms  
7=Ph-Ph mag
- 79 Term 4 coefficient, (Enter value)
- 80 Temperature, (Application-Transformer mode)  
0=Disabled  
1=Enabled °C  
2=Enabled °F
- 81 Sum watts, (Auxiliary-Master)  
0=Master  
1=Master + Slave
- 82 Wiring configuration, (Acquisition control)  
0=Single phase 1  
1=2 phase 2 wattmeter  
2=3 phase 2 wattmeter  
3=3 phase 3 wattmeter  
4=Single phase 2  
5=Single phase 3  
6=3 phase 2 wattmeter + PH3  
7=Independent
- 83 Integration, (Power analyzer - Power integrator)  
0=Signed  
1=Magnitude
- 84 Torque + speed, (Application options – PWM motor drive)  
0=Disabled  
1=Analogue speed  
2=Pulsed speed
- 85 Torque scaling Nm/V, (Applications – PWM motor drive) (Also transformer scale factor Deg/v)(Enter Nm/v value)

## PPA55xx communications manual

- 86      Speed scaling Hz/V, (Applications – PWM motor drive)(Enter rpm/v value)
- 87      Pulses per revolution, (Applications–PWM motor drive)(Enter pulses/rev value)
- 88      Integration display, (Mode - Power integrator)  
         0=Total  
         1=Average
- 89      Sum current average, (Power analyzer)  
         0=Total  
         1=Average
- 90      Input compensation, (Mode)  
         0=Disabled  
         1=Enabled
- 91      Power factor sign, (Power analyzer)  
         0=Negative lagging  
         1=Negative leading
- 92      VAr sign, (Power analyzer)  
         0= Negative lagging  
         1=Negative leading
- 93      Efficiency computation, (Power analyzer)  
         0=Disabled  
         1=Phase 1 / Phase 2  
         2=Phase 2 / Phase 1  
         3=Slave/Master  
         4=Master/Slave  
         5=Mechanical/Sum  
         6=Sum/Mechanical  
         7=Phase 3/Sum  
         8=Sum/Phase 3
- 94      Range lock across phases, (Range – when acquisition is using 3 phases)  
         0=Disabled  
         1=Enabled
- 95      Torque offset, (Applications–PWM motor drive)(Also transformer mode)(Enter Nm  
                         offset value)
- 96      Speed offset, (Application options mode – PWM motor drive – rpm offset value)

- 99 Computation mode, (Harmonic analyzer)  
 0=Difference formula  
 1=Harmonic series  
 2=TIF  
 3=THF  
 4=TRD  
 5=TDD  
 6=Series harmonic phase  
 7=Interharmonic sweep  
 8=Harmonic RMS  
 9=Harmonic factor
- 100 Selected harmonic, (Harmonic analyzer - figure = harmonic required)
- 101 Harmonic series up to, (Harmonic analyzer - figure = harmonic max)
- 102 Voltage bargraph scale, (Harmonic analyzer - figure = % required)
- 103 Current rating (TRD), (Harmonic analyzer - TRD mode - enter figure)
- 104 Current bargraph scale, (Harmonic analyzer - figure = % required)
- 105 Frequency range up to 417 Harmonics, (Harmonic analyzer)  
 0=Normal  
 1=Extended Frequency range
- 106 Timebase, (Scope - Enter figure/div)
- 107 trigger level, (Scope - Enter figure/div)
- 108 Pretrigger, (Scope)  
 0=None  
 1=25%  
 2=50%  
 3=75%
- 109 trigger polarity, (Scope)  
 0=Rising edge  
 1=Falling edge

- 110      trigger Mode, (Scope)  
            0=Auto  
            1=Normal  
            2=Single shot
- 111      trigger reference, (Scope)  
            0=Voltage  
            1=Current
- 112      trigger phase, (Scope)  
            0=Phase 1  
            1=Phase 2  
            2=Phase 3
- 113      cursors enable, (Scope)  
            0=Off  
            1=On
- 114      trigger HF reject, (Scope)  
            0=Off  
            1=On
- 115      Trace, (Scope)  
            0=Dual  
            1=Voltage  
            2=Current
- 119      zoom 2 high resolution, (System)  
            0=Disabled  
            1=Enabled
- 120      Brightness, (System)  
            0=Low  
            1=High
- 121      Display, (System)  
            0=Colour  
            1=White on black  
            2=Black on white

## PPA55xx communications manual

- |     |                                                                                                                                           |
|-----|-------------------------------------------------------------------------------------------------------------------------------------------|
| 122 | Auxiliary device, (Aux control)<br>0=None<br>6=PCIS                                                                                       |
| 128 | Switch phase offset, (Aux control – PCIS device)<br>0=0°<br>1=45°<br>2=90°<br>3=135°<br>4=180°<br>5=225°<br>6=270°<br>7=315°              |
| 129 | Switch on cycles, (Aux control – PCIS device)<br>0=Single cycle<br>1=Continuous<br>2=Half cycle                                           |
| 130 | Gear ratio, (Aux control – frequency reference – speed - Enter ratio value)                                                               |
| 131 | 2 Wattmeter sum computation, (Power Analyser)( select in acquisition wiring-2 phase 2 wattmeter)<br>0=Low distortion<br>1=High Distortion |
| 132 | Integrator-run time (Hours), (Mode – Power integrator - enter figure)                                                                     |
| 133 | Integrator-Run time (mins), (Mode - Power integrator – enter figure)                                                                      |
| 134 | Ph – Ph Measurement, (Power analyser)<br>0=ph-ph rms<br>1=ph-ph Mean<br>2=Star – Delta Type B<br>3=Delta – Star<br>4=Star – Delta Type A  |
| 135 | Difference THD, (Power analyser)<br>0=Disabled<br>1=Enabled including dc<br>2=Enabled excluding dc                                        |

## PPA55xx communications manual

- 137      **Parameter,** (Impedance analyzer)  
            0=Auto  
            1=Capacitance  
            2=Inductance  
            3=Impedance
- 138      **Measurement,** (Impedance analyzer)  
            0=Series  
            1=Parallel
- 139      **Phase offset,** (Impedance analyzer - Enter figures)
- 140      **Voltage peak,** (rms voltmeter)  
            0=Signed  
            1=Separate  
            2=Unfiltered
- 143      **Sampling Rate / compensation** (ACQU - sampling)  
            0=Auto  
            1=Fast  
            2=Medium  
            3=Slow  
            4=19.2uS compensation  
            5=3.857uS compensation
- 144      **Rectified mean,** (rms voltmeter)  
            0=Absolute  
            1=Normalised
- 148      **dB offset,** (Phase meter - Enter figures)
- 150      **Computation,** (Phase meter)  
            0=ch2/ch1  
            1=ch1/ch2
- 152      **RS232 printer enable,** (Remote options)  
            0=Disabled  
            1=Enabled
- 153      **IEEE address,** (Remote options – GPIB mode – enter address figures)

- 154      Interface, (Remote options)  
            0=RS232  
            1=USB  
            2=LAN  
            3=GPIB
- 155      Recall with program, (Remote options)  
            0=Off  
            1=On
- Alarm functions**
- 156      Alarm 1 data, (Alarm options)  
            0=Zoom1  
            1=Zoom 2  
            2=Zoom3  
            3=Zoom 4
- 157      Alarm 1 type, (Alarm options)  
            0=Disabled  
            1=Linear  
            2=Alarm if high  
            3=Alarm if low  
            4=Outside window  
            5=Inside window
- 158      Alarm 1 high threshold, (Alarm options – alarm if high – enter figure)
- 159      Alarm 1 low threshold, (Alarm options – alarm if low – enter figure)
- 160      Alarm latch, (Alarm options – alarm if high)  
            0=Off  
            1=On
- 161      Alarm sounder, (Alarm options – alarm if high)  
            0=Enabled  
            1=Disabled

## PPA55xx communications manual

- 162      Analog output, (Alarm options – alarm if high)  
                 0=Disabled  
                 1=Zoom 1  
                 2=Zoom 2  
                 3=Zoom 3  
                 4=Zoom 4  
                 5=Manual
- 164      Analog zero, (Alarm options – enter figure)
- 165      Analog full scale, (Alarm options – enter figure)
- 167      Alarm 2 data, (Alarm options)  
                 0=Zoom1  
                 1=Zoom 2  
                 2=Zoom 3  
                 3=Zoom 4
- 168      Alarm 2 type, (Alarm options)  
                 0=Disabled  
                 1=Linear  
                 2=Alarm if high  
                 3=Alarm if low  
                 4=Outside window  
                 5=Inside window
- 169      Alarm 2 high threshold, (Alarm options – alarm if high – enter figure)
- 170      Alarm 2 low threshold, (Alarm options – alarm if low – enter figure)
- 171      Sync on alarm, (Alarm options – alarm if high)  
                 0=Disabled  
                 3=Enabled
- 176      Enable channel 3, (Range–voltage input)(Sys - independent ranging enabled)  
                 1=Internal  
                 3=External attenuator
- 177      Enable channel 4, (Range – current input)(Sys independent ranging enabled)  
                 1=Internal  
                 2=External shunt



## PPA55xx communications manual

- 178      Input range channel 3, (Range – minimum range voltage) (Sys independent ranging enabled)  
            0=300mV  
            1=1V  
            2=3V  
            3=10V  
            4=30V  
            5=100V  
            6=300V  
            7=1kV  
            8=3KV
- 179      Input range channel 4, (Range – minimum range current) (Sys independent ranging enabled)  
            0=30mA  
            1=100mA  
            2=300mA  
            3=1A  
            4=3A  
            5=10A  
            6=30A  
            7=100A  
            8=300A
- 180      Input ranging channel 3, (Range – autoranging voltage) (Sys independent ranging enabled)  
            0=Full Autorange  
            1=Range up only  
            2=Manual
- 181      Input ranging channel 4, (Range – autoranging current) (Sys independent ranging enabled)  
            0= Full Autorange  
            1=Range up only  
            2=Manual
- 182      Coupling phase 2, (Coupling) (Sys independent ranging enabled)  
            0=ac +dc  
            1=ac  
            2=dc
- 183      Bandwidth phase 2,(Coupling - bandwidth) (Sys independent ranging enabled)  
            0=Wide (dc-2MHz)  
            1=Low (dc-200KHz)  
            2=dc (dc-5Hz)

## PPA55xx communications manual

- 184      Scale factor channel 3 voltage, (Ranging - Enter figures as required)(Sys independent ranging enabled)
- 185      Scale factor channel 4 current, (Ranging - Enter figures as required) (Sys independent ranging enabled)
- 186      External attenuator channel 3, (Ranging - voltage input - attenuator ratio Enter figures as required)(Sys independent ranging enabled)
- 187      External shunt channel 4, (Ranging - current input - resistance value Enter figures as required) (Sys independent ranging enabled)
- 196      ID tag prepends comms replies  
            0=Off  
            1=On
- 197      High speed Mode (ACQU - Advanced options)  
            0=Disabled  
            1=Enabled
- 200      Enable channel 5, (Range - voltage input) (Sys independent ranging enabled)  
            1=Internal  
            3=External attenuator
- 201      Enable channel 6, (Range - current input) (Sys independent ranging enabled)  
            1=Internal  
            2=External shunt
- 202      Input range channel 5, (Range - minimum range voltage)  
            0=300mV  
            1=1V  
            2=3V  
            3=10V  
            4=30V  
            5=100V  
            6=300V  
            7=1kV  
            8=3KV

## PPA55xx communications manual

- 203 Input range channel 6, (Range – minimum range current) (Sys independent ranging enabled)  
 0=30mA  
 1=100mA  
 2=300mA  
 3=1A  
 4=3A  
 5=10A  
 6=30A  
 7=100A  
 8=300A

204 Input ranging channel 5, (Range – autoranging voltage) (Sys independent ranging enabled)  
 0=Full Autorange  
 1=Range up only  
 2=Manual

205 Input ranging channel 6, (Range – autoranging current) (Sys independent ranging enabled)  
 0= Full Autorange  
 1=Range up only  
 2=Manual

206 Coupling phase 3, (Coupling) (Sys independent ranging enabled)  
 0=ac +dc  
 1=ac  
 2=dc

207 Bandwidth phase 3, (Coupling - bandwidth) (Sys independent ranging enabled)  
 0=Wide (dc-2MHz)  
 1=Low (dc-200KHz)  
 2=dc (dc-5Hz)

208 Scale factor channel 5 voltage, (Ranging - Enter figures as required) (Sys independent ranging enabled)

209 Scale factor channel 6 current, (Ranging - Enter figures as required) (Sys independent ranging enabled)

210 External attenuator channel 5, (Ranging – voltage input - attenuator ratio as required) (Sys independent ranging enabled)

## PPA55xx communications manual

- 211 External shunt channel 6, (Ranging – current input – resistance value as required) (Sys independent ranging enabled)
- 217 Memory, (Program)  
0=Internal  
1=USB Memory stick
- 218 Data, (Program)  
0=Program  
1=Results  
2=Datalog
- 219 Action, (Program)  
0=Recall  
1=Store  
2=Delete
- 220 Location, (Program - Enter figures as required)
- 240 Set clock hours, (System – Enter figures as required)
- 241 Set clock minutes, (System – Enter figures as required)
- 242 Set clock Seconds, (System – Enter figures as required)
- 243 Set date day, (System – Enter figures as required)
- 244 Set date month, (System – Enter figures as required)
- 245 Set date year, (System – Enter figures as required)

## Appendix C – MULTILOG parameters

| function | measurement                          | notes           |
|----------|--------------------------------------|-----------------|
| 1        | frequency                            |                 |
| 2        | watts                                |                 |
| 3        | VA                                   |                 |
| 4        | VAr                                  |                 |
| 5        | power factor                         |                 |
| 6        | fundamental watts                    |                 |
| 7        | fundamental VA                       |                 |
| 8        | fundamental VAr                      |                 |
| 9        | fundamental PF                       |                 |
| 10       | harmonic watts                       |                 |
| 11       | harmonic watts %                     |                 |
| 12       | impedance                            | Imp meter mode  |
| 13       | resistance                           | Imp meter mode  |
| 14       | reactance                            | Imp meter mode  |
| 15       | impedance phase                      | Imp meter mode  |
| 16       | efficiency                           |                 |
| 17       | fundamental efficiency               |                 |
| 18       | maths                                |                 |
| 19       | integrated watts                     | integrator mode |
| 20       | integrated VA                        | integrator mode |
| 21       | integrated VAr                       | integrator mode |
| 22       | integrated rms current               | integrator mode |
| 23       | average power factor                 | integrator mode |
| 24       | integrated fundamental watts         | integrator mode |
| 25       | integrated fundamental VA            | integrator mode |
| 26       | integrated fundamental VAr           | integrator mode |
| 27       | integrated fundamental current       | integrator mode |
| 28       | average fundamental power factor     | integrator mode |
| 29       | average integrated watts             | integrator mode |
| 30       | average integrated VA                | integrator mode |
| 31       | average integrated VAr               | integrator mode |
| 32       | average integrated fundamental watts | integrator mode |
| 33       | average integrated fundamental VA    | integrator mode |
| 34       | average integrated fundamental VAr   | integrator mode |
| 35       | average rms voltage                  | integrator mode |
| 36       | average fundamental voltage          | integrator mode |
| 37       | Standby mode frequency               |                 |
| 38       | DC watts                             |                 |

## PPA55xx communications manual

|    |                                    |                  |
|----|------------------------------------|------------------|
| 39 | average rms current                | integrator mode  |
| 40 | average fundamental current        | integrator mode  |
| 41 | delta watts                        |                  |
| 42 | fundamental delta watts            |                  |
| 43 | elapsed time                       | integrator mode  |
| 44 | resistance                         | Imp meter mode   |
| 45 | inductance                         | Imp meter mode   |
| 46 | capacitance                        | Imp meter mode   |
| 47 | tan delta                          | Imp meter mode   |
| 48 | Q factor – see notes               | Imp meter mode   |
| 48 | k-factor – see notes               | Transformer mode |
| 49 | corrected power                    | Transformer mode |
| 50 | rms voltage                        |                  |
| 51 | rms current                        |                  |
| 52 | fundamental voltage                |                  |
| 53 | fundamental current                |                  |
| 54 | voltage phase                      |                  |
| 55 | current phase                      |                  |
| 56 | harmonic voltage                   |                  |
| 57 | harmonic current                   |                  |
| 58 | dc voltage                         |                  |
| 59 | dc current                         |                  |
| 60 | ac voltage                         |                  |
| 61 | ac current                         |                  |
| 62 | peak voltage                       |                  |
| 63 | peak current                       |                  |
| 64 | voltage crest factor               |                  |
| 65 | current crest factor               |                  |
| 66 | rectified mean voltage             |                  |
| 67 | rectified mean current             |                  |
| 68 | voltage form factor                |                  |
| 69 | current form factor                |                  |
| 70 | voltage harmonic                   | harmonic mode    |
| 71 | current harmonic                   | harmonic mode    |
| 72 | voltage harmonic percentage        | harmonic mode    |
| 73 | current harmonic percentage        | harmonic mode    |
| 74 | voltage thd                        | harmonic mode    |
| 75 | current thd                        | harmonic mode    |
| 76 | voltage tif                        | harmonic mode    |
| 77 | current tif                        | harmonic mode    |
| 78 | phase to phase rms voltage         |                  |
| 79 | phase to phase fundamental voltage |                  |
| 80 | phase to phase voltage phase angle |                  |

## PPA55xx communications manual

|       |                                  |                  |
|-------|----------------------------------|------------------|
| 81    | phase to phase rms voltage       |                  |
| 82    | voltage surge                    |                  |
| 83    | current surge                    |                  |
| 84    | voltage rms deviation            | transformer mode |
| 85    | voltage fundamental deviation    | transformer mode |
| 86    | voltage phase deviation          | transformer mode |
| 87    | voltage positive peak            |                  |
| 88    | current positive peak            |                  |
| 89    | voltage negative peak            |                  |
| 90    | current negative peak            |                  |
| 91    | voltage positive peak unfiltered |                  |
| 92    | current positive peak unfiltered |                  |
| 93    | voltage negative peak unfiltered |                  |
| 94    | current negative peak unfiltered |                  |
| 95-99 | reserved for future expansion    |                  |

### Notes:

Function 48 is used to measure Q-factor in Imp meter mode AND to measure corrected power in Transformer mode.

Functions 78 and 81 are the same.

### Phase selection:

- 1 = phase 1
- 2 = phase 2
- 3 = phase 3
- 4 = sum
- 5 = neutral
- 6 = ADI40

## PPA55xx communications manual

There are some special functions:

| Measurement (function)  | phase   | Previous function         |
|-------------------------|---------|---------------------------|
| mechanical speed in Hz  | neutral | dc voltage (function 58)  |
| mechanical speed in rpm | neutral | ac voltage (function 60)  |
| torque in Nm            | neutral | rms voltage (function 50) |
| mechanical power        | neutral | Watts (function 2)        |
|                         |         |                           |

Notes:

These special functions must use the Neutral Phase (Phase 5)

Due to the limited number of function numbers available these Special functions re-use function numbers that apply to other measurements for Phases 1 to 3.

Examples for setting up each measurement:

- > multil,0                      Setting to clear any previous data
- > multil,1,5,58                Setting for Mechanical speed in Hz
- > multil,1,5,60                Setting for Mechanical speed in rpm
- > multil,1,5,50                Setting for Torque in Nm
- > multil,1,5,2                 Setting for Mechanical Power in nW
- > multil?                        Setting to read back and display data

Example script to return results for Mechanical Power, Torque & Speed (in rpm):

```
>
>
> multil,0
> multil,1,5,2
> multil,2,5,50
> multil,3,5,60
> multil?
-1.8846E-7,-2.0984E-3,8.5765E-4
```



## **Newtons4th Ltd. contact details**

Please direct all queries or comments regarding the PPA55xx instruments or this manual to:

Newtons4th Ltd.  
1 Bede Island Road  
Leicester  
LE2 7EA  
United Kingdom

Tel: (0116) 230 1066      international    +44 116 230 1066  
Fax: (0116) 230 1061      international    +44 116 230 1061

E-mail address:      [sales@newtons4th.com](mailto:sales@newtons4th.com)  
                                 [office@newtons4th.com](mailto:office@newtons4th.com)

Web site:              [www.newtons4th.com](http://www.newtons4th.com)

At Newtons4th Ltd. we have a policy of continuous product improvement and are always keen to hear comments, whether favourable or unfavourable, from users of our products. Please telephone, fax, write or e-mail with your comments.